

MOLLE CENTER CONSOLE AND BRIDGE

15'-20' FORD F-150
17'-21' F-250 & F-350
CCFF-01



TOOLS REQUIRED

- #3, #4 Allen head sockets
- 11/32nds Drill Bit
- Rivet Nut Tool
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 Persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hour
- Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (8) M6x16mm Allen
- (8) M6 Split Washers
- (8) M6 Nutserts
- (8) M6 Flat Washers
- (4) Locking Knobs
- (4) M5x16 Allen
- (4) M5 Flat Washer
- (4) M5 Split Washer

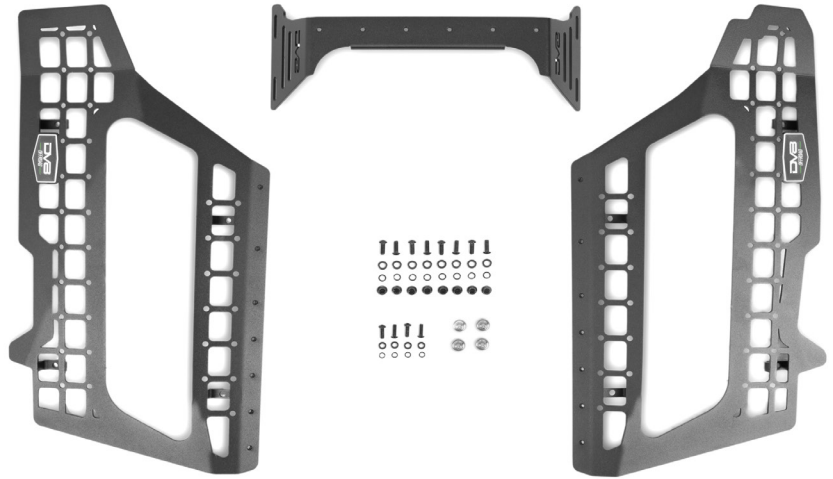

STEP 1 | Loosely assemble the DV8 Center Console over the factory center console.

Align DV8 center console.



INSTALLATION MANUAL

STEP 2 | Once DV8 Center Mount is aligned mark (4) mounting holes on each side that will be drilled.

Assistance to help hold everything in place is recommended.

Ensure the console follows the body lines of the vehicle, does not crash anywhere, and that all knobs/switches are accessible.





STEP 3 | Using a 11/32 drill bit, drill the (4) mounting holes on each side.



INSTALLATION MANUAL

STEP 4 | Using a rivet nut tool, install (8) provided nutserts.

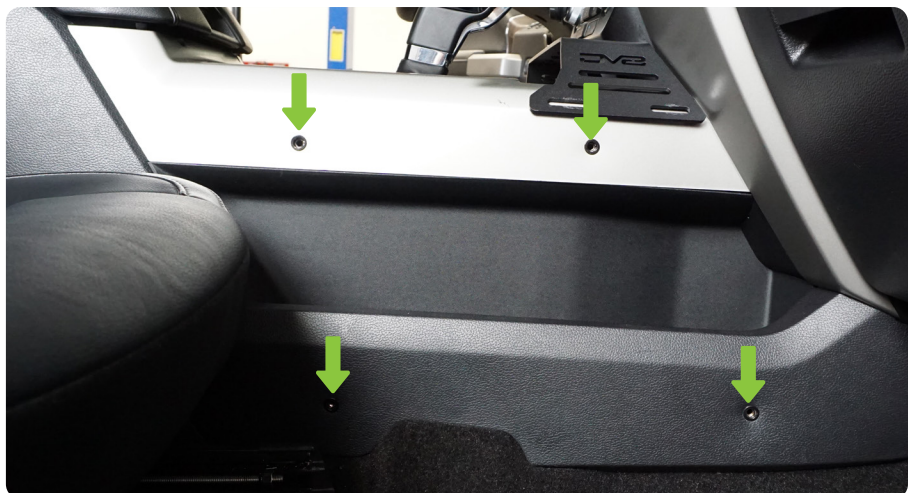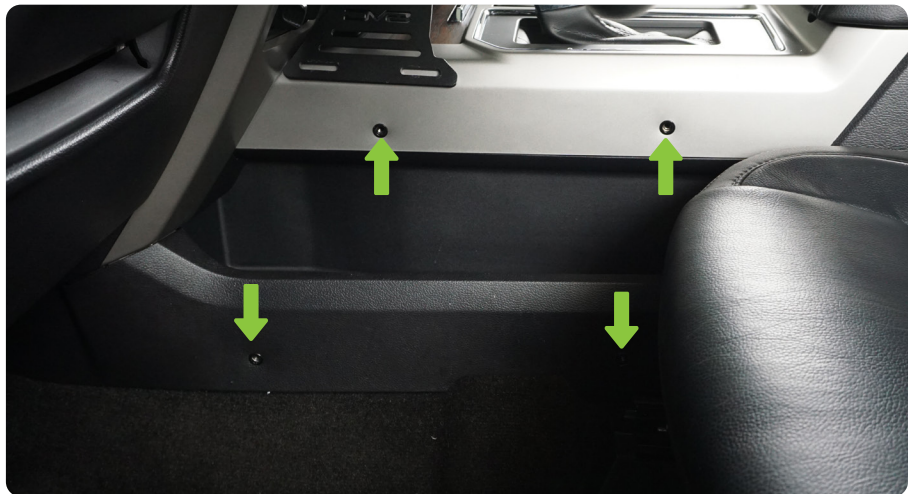


INSTALLATION MANUAL

STEP 5 | Using a #4 Allen Bit and provided M6 hardware, secure the DV8 center console side panels to the factory center console.



STEP 6 | Using the (4) Locking Knobs, secure the Bridge piece to the side panels.

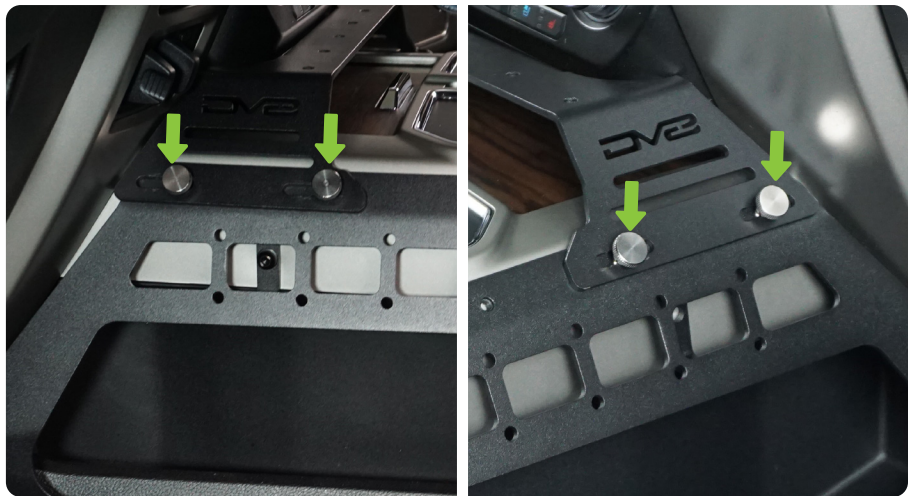

INSTALLATION MANUAL

STEP 7 | Double check that all hardware is secure.

Congratulations, installation of the DV8 Center Console is now complete.

