

## BRONCO DROP-POD MOUNT

21+ FORD BRONCO

LBBR-08



### TOOLS REQUIRED

- T-30 Torx Bit
- Automotive Trim Pry Tool
- Safety Glasses

### SKILL LEVEL

- Novice/Intermediate
- 1 (you)

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.



**STEP 1** | Using a T30 Torx Bit, remove the (2) accessory ready bolts from the side mirror.



# INSTALLATION MANUAL

**STEP 2** | Using a Automotive Trim Pry Tool, gently pry up on side mirror plastic trim.

Carefully guide pod light wiring harnesses under the plastic, follow your light kit's install instructions to power lights.





# INSTALLATION MANUAL

**STEP 3** | Loosely secure the DV8 Drop-Pod mount to the side mirror using a factory Torx screw previously removed.



**STEP 4** | Passenger side: Guide antenna through the DV8 mount and lay the mount into place, then loosely secure the DV8 mount to side mirror.



# INSTALLATION MANUAL


**STEP 5 |** If you are running pod lights, secure the pod-light bracket on of the DV8 mount using factory hardware and a T30 Torx bit.

If you are not running lights in this location, secure the DV8 mount using the factory hardware with a T30 torx bit.



**STEP 6 |** Optional: A set of additional mounting tabs are included in the kit, these tabs allow Antennas, Whips and etc... to be installed.

Insert the bent key on the tab into the bracket, lay tab flat.

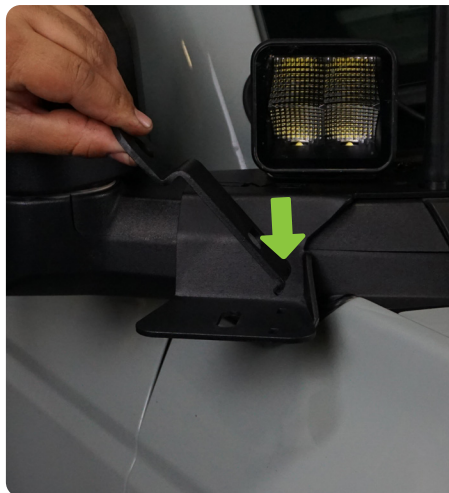



# INSTALLATION MANUAL

**STEP 7** | If you are running upper pod lights, finish installing them to the mounting brackets that were provided with the light.

If you are running lower pod lights, install them at this time using the hardware provided with the light.

*Note: To run a whip, antenna, or similar item be sure to sandwich the accessory tab between the pod light mount and DV8 bracket.*



**STEP 8** | If you are running a whip, antenna, or a similar item, mount it now to the accessory tab using the hardware provided with your product.

Double check fitment and that all hardware is secure.



# INSTALLATION MANUAL

**STEP 9** | Congratulation, you are finished installing the 21+ Bronco DV8 Drop Style Pod Lights!

