

TUNDRA CENTER CONSOLE AND BRIDGE

3RD GEN (2022+) TOYOTA TUNDRA
CCT2-01



TOOLS REQUIRED

- Nutsert Tool (Optional)
- Drill
- 11/32" Drill Bit
- Ratchet
- 4mm Allen Bit

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about an half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

HARDWARE INCLUDED

- (12) M6x14 Allen Head
- (12) M6 Flat Washer
- (12) M6 Serrated Nuts
- (12) M6x14 Nutserts

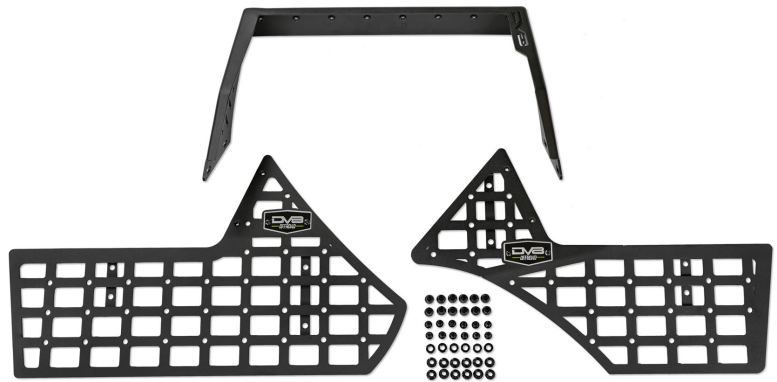

STEP 2

Assemble the bridge and side mounts using a 4mm allen bit and provided M6 hardware..

Fit the center console into place.

When you are satisfied with the fitment, mark the mounting holes with a sharpie and remove/disassemble the center console and bridge.

Note: An extra pair of hands to hold everything in place will make this process easier.



INSTALLATION MANUAL

STEP 3

Use an 11/32" drill bit to drill out the marked mounting positions.

Note: Drill accurately and carefully to avoid scuffing the trim unnecessarily. Do not drill any further than the center console trim. It may be helpful to pull the center console trim back slightly to ensure you are drilling only through center console trim.



STEP 3

(Optional) You may choose to install the provided M6 nutserts with a nutsert tool for an easier installation.

We do highly recommend using a nutsert on the driver side front upper mounting hole due to how difficult it is to reach back with a nut.



STEP 4

If you installed nutserts, drop the center console and bridge into place and secure using provided M6 hardware and a 4mm allen bit.

If you did not use nutserts, press the M6 hardware through the mounting holes to hold it in place.

Pull back on the center console trim to install the serrated nuts. Use a 4mm allen bit while applying pressure with your hand on the serrated nut until "catches" and is secured.



INSTALLATION MANUAL

STEP 4

Double check fitment and all hardware is secure. Congratulations, you are finished with the install of the 22+ Toyota Tundra Center Console and Bridge.

