

## CENTER CONSOLE

24+ LAND CRUISER LC 250

CCT4-01



### TOOLS REQUIRED

- 11/32" Drill Bit
- Nutsert tool
- 4mm Allen head
- Safety Glasses

### SKILL LEVEL

- Novice/Intermediate
  - 1 (you) person
- Little skill level required, you can easily install it by yourself.

### TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about an hour and a half

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.


## HARDWARE INCLUDED

- (12) M6x14mm Nutserts
- (12) M6x16mm Allen Head Bolts
- (12) M6 Flat Washers



**STEP 1** | Align the Molle panels with the factory center console.

Mark the (6) mounting holes that will need to be drilled out.

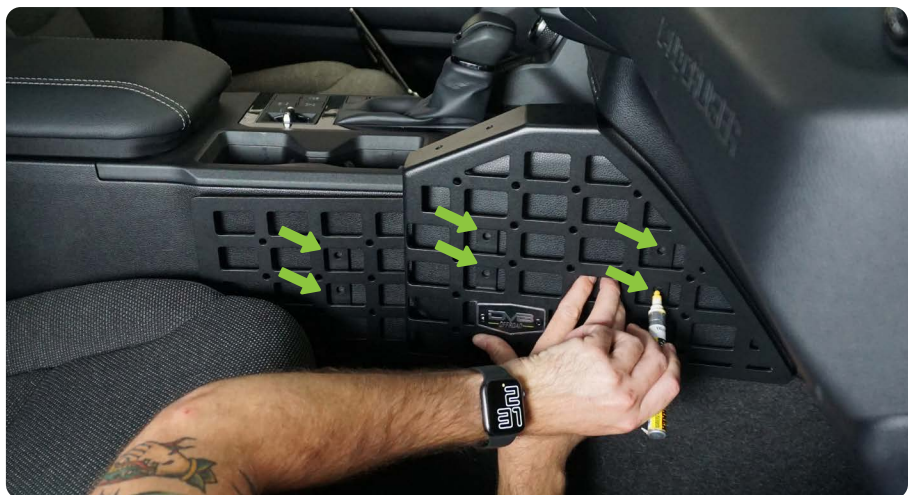

# INSTALLATION MANUAL



**STEP 2** | Use a 11/32" drill bit to drill out the (6) mounting holes on each side.

Be careful not to drill too deep, the factory center console panels are only 1/8-1/4" thick.





# INSTALLATION MANUAL

**STEP 3** | Use a Nutsert tool to install the provided M6 Nutserts into the factory center console panels.



**STEP 4** | Mount the DV8 Center Console Molle Panel on to the factory center console using the provided M6 Allen head bolts and flat washers.

Use (1) Flat washer per Allen head bolt.

Double check that all hardware is secured hand tight.

Repeat steps for other side of the center console.



# INSTALLATION MANUAL

---

**STEP 5** | Congratulations, installation of the DV8 Center Console is complete.

