

REAR SEAT COMPRESSOR MOUNT

2023+ CHEVY COLORADO/ GMC CANYON
CMCS3-01



TOOLS REQUIRED

- + 10mm socket
- + #5 Allen tool/socket

SKILL LEVEL

- + Novice/Intermediate
- + 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful to prevent injury or damage.

TIME REQUIRED

- + Approximately 1.5 Hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- *Always wear eye protection when operating power tools*

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover


HARDWARE INCLUDED

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.



(2) M8x20
COUNTERSUNK ALLEN
BOLTS

PARTS INCLUDED

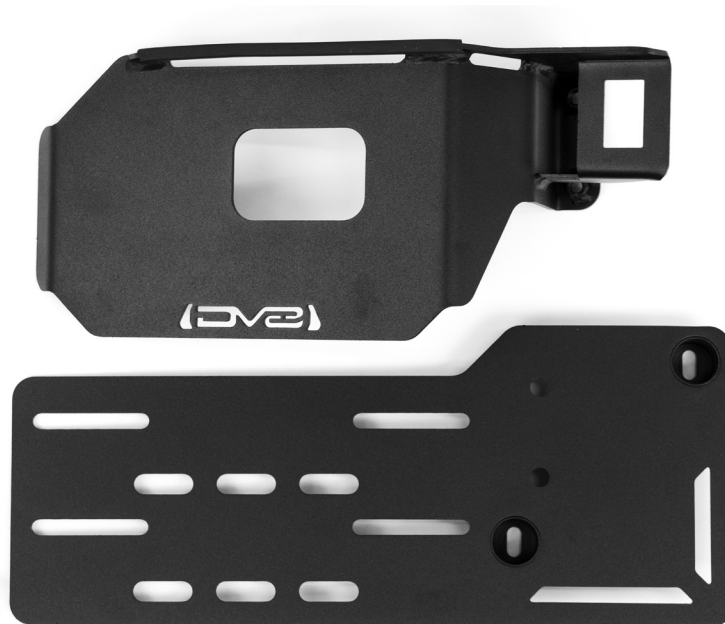

STEP 1 | ON THE REAR DRIVER SIDE OF THE CABIN, USE THE LEVER ON THE SIDE OF THE SEAT TO LIFT THE SEAT TO REACH INTO THE COMPARTMENT UNDER THE SEAT.

NOTE: WE RECOMMEND THAT WIRING AND COMPRESSOR PREFERENCE BE CHOSEN BEFORE PROCEEDING, TO MAKE INSTALLATION EASIER.




STEP 2 | REMOVE THE SPARE TIRE TOOL. THESE CAN BE REINSTALLED LATER.



STEP 3 | REMOVE THE SCISSOR JACK BY UNSCREWING THE HANDLE. THIS CANNOT BE REINSTALLED WITH OUR COMPRESSOR MOUNT.




STEP 4 | USING A 10MM SOCKET, REMOVE THE (3) NUTS HOLDING DOWN THE SCISSOR JACK PLATE.

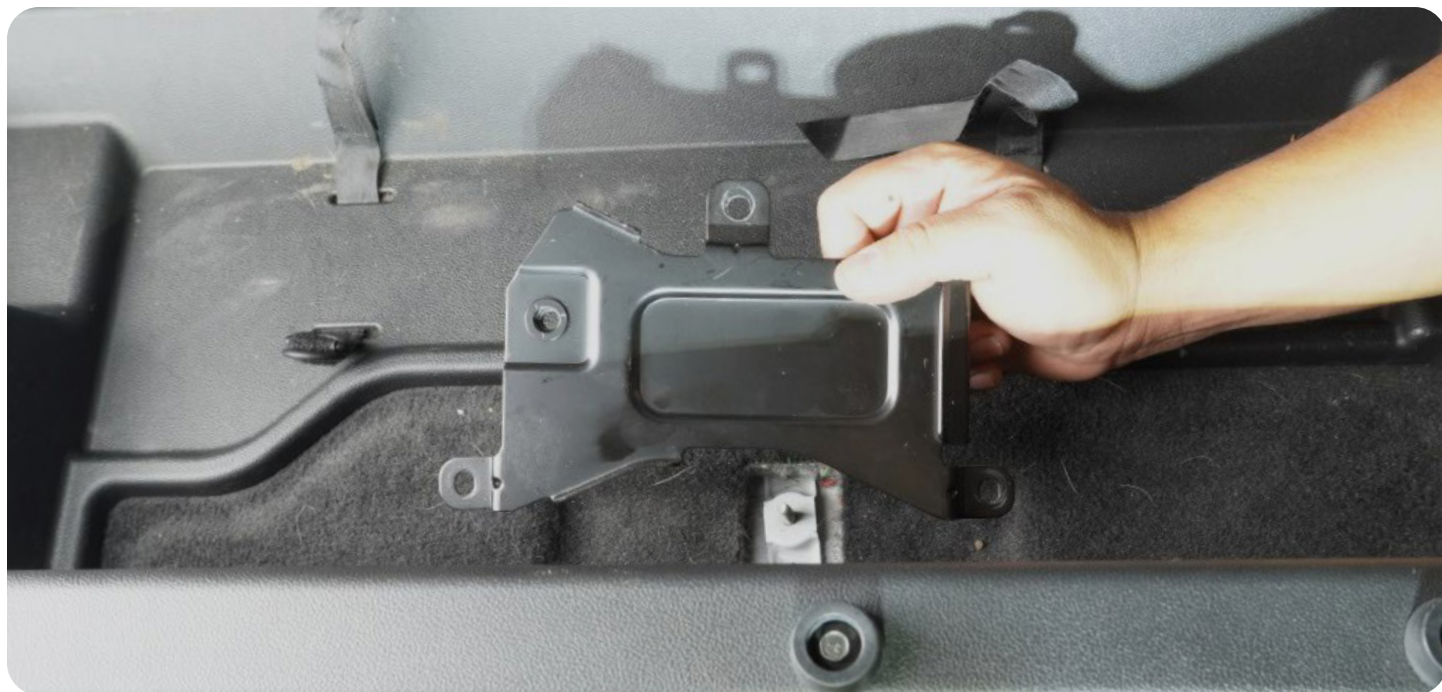


STEP 5 | ASSEMBLE THE COMPRESSOR MOUNT. USING THE PROVIDED HARDWARE OF THE COMPRESSOR, INSTALL THE MOUNTING PLATE ON TO THE COMPRESSOR.

NOTE: ORIENTATION OF THE COMPRESSOR SHOULD BE POSITION TO HAVE ACCESS TO THE AIR HOSE COUPLER AND WIRING CONNECTORS.

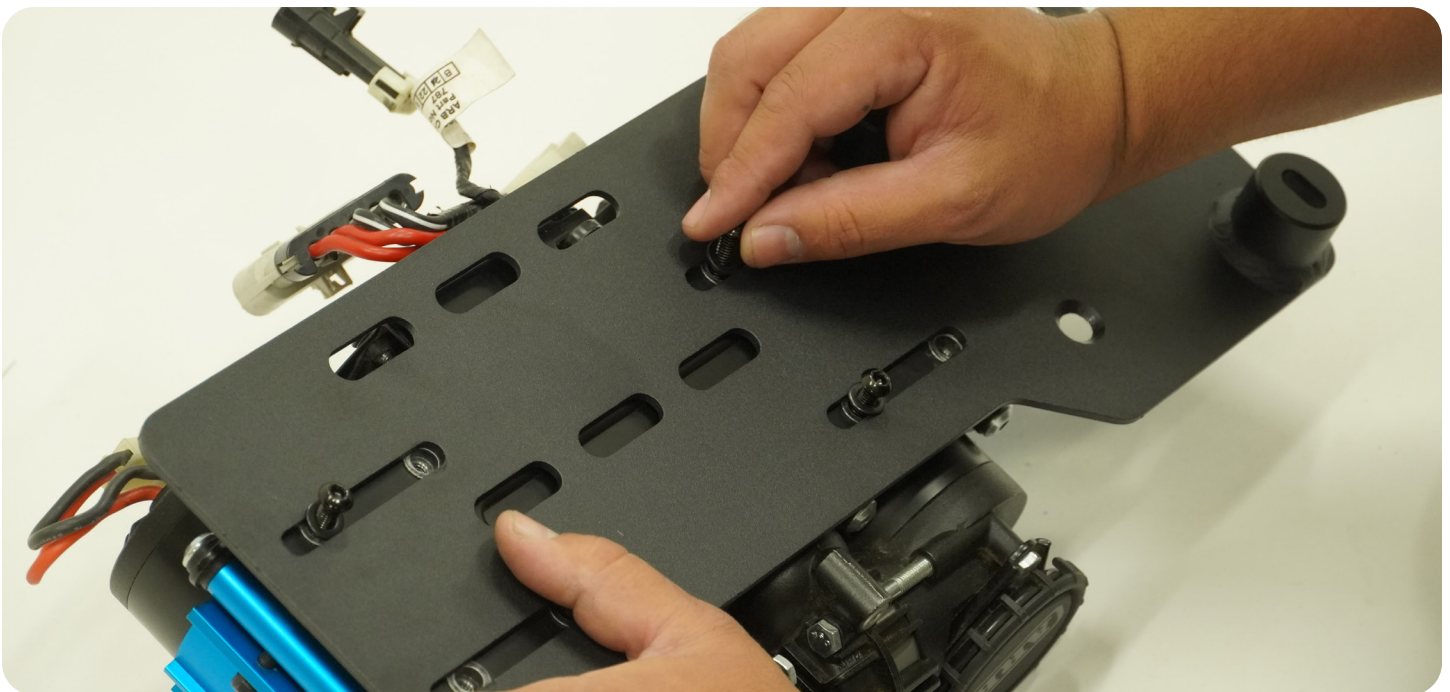

STEP 6 | PLACE BRACKET MOUNT OVER THE COMPRESSOR.

NOTE: IF USING THE BRUSHLESS ARB COMPRESSOR, YOU WILL NEED A 90DEG FITTING FOR THIS MOUNT (NOT INCLUDED).

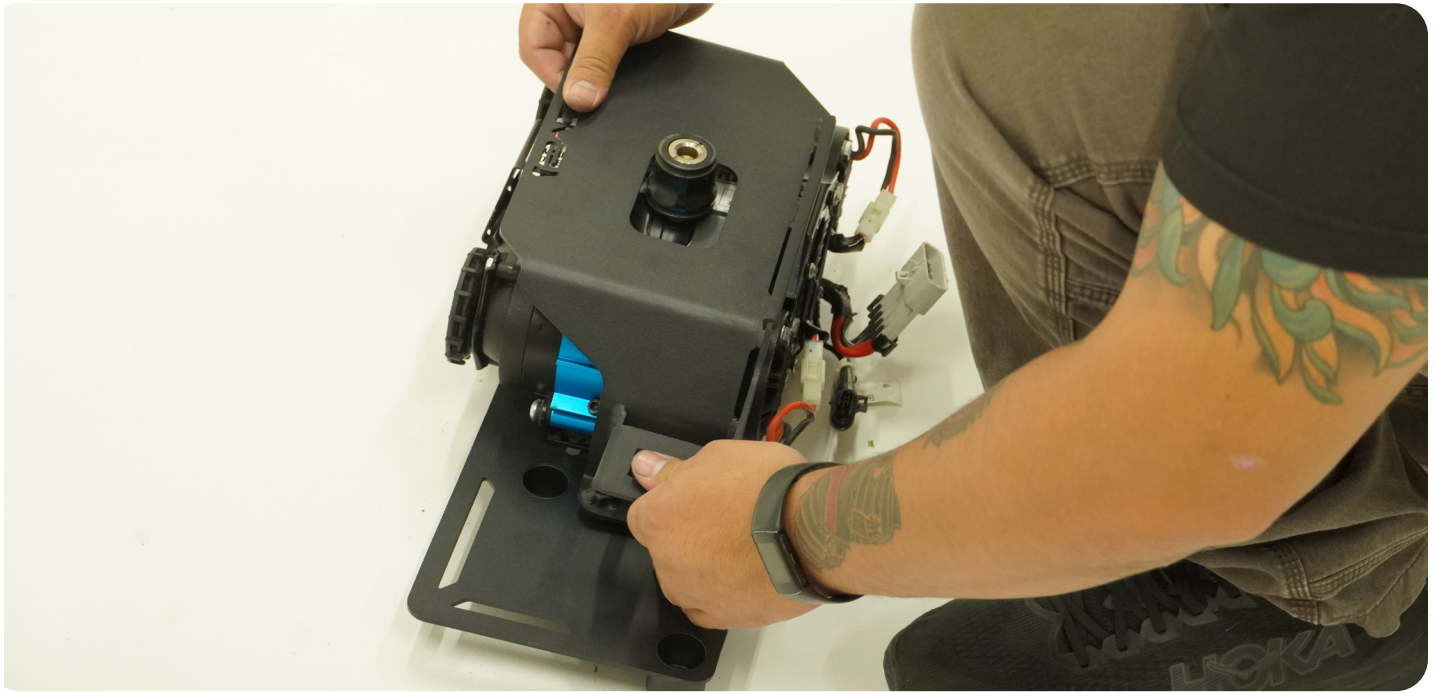


STEP 7 | INSTALL THE (2) M8X20 COUNTERSUNK BOLT. USING A #5 ALLEN WRENCH/SOCKET, SECURE THE BOLTS.





STEP 8 | INSTALL THE RUBBER PIECE TO THE EDGE ON THE MOUNTING BRACKET.

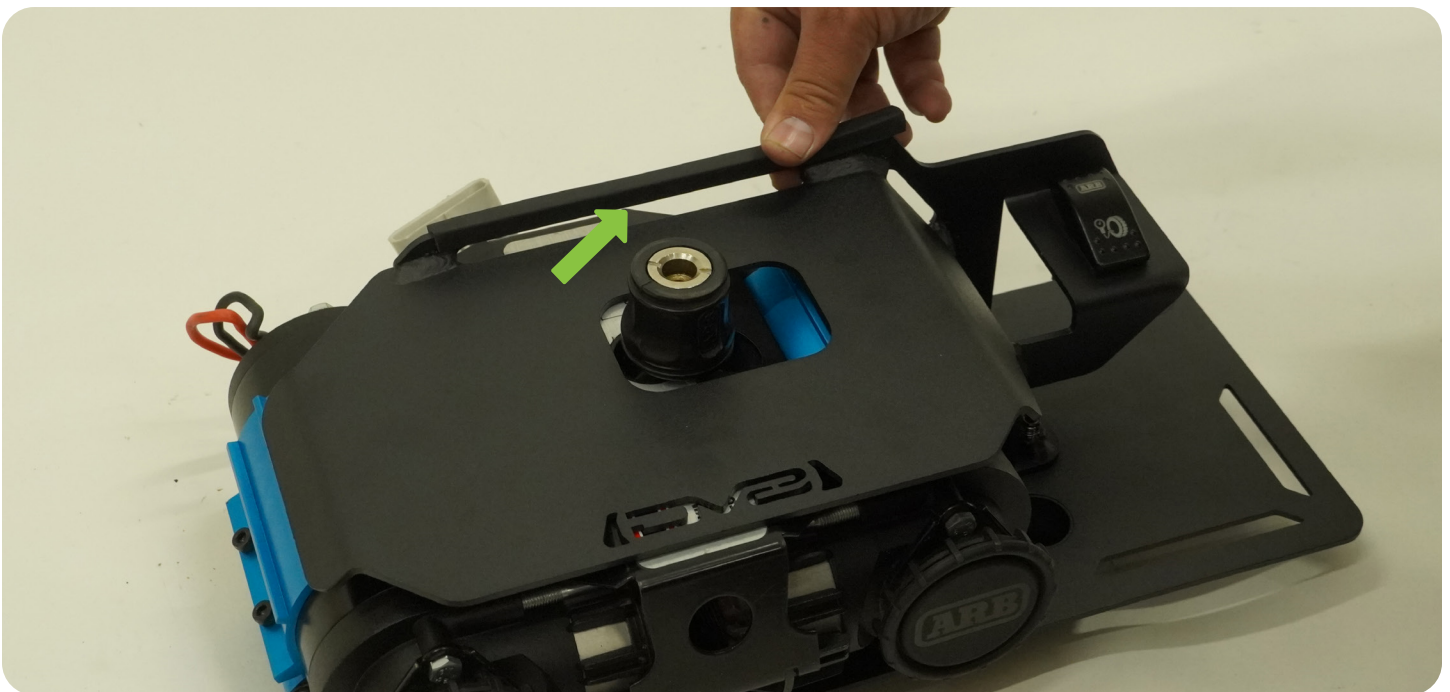




STEP 9 | ONCE COMPRESSOR IS FULLY ASSEMBLE. PLACE IT IN THE SEAT COMPARTMENT.



STEP 10 | THE ASSEMBLY WILL NEED TO BE ANGLED AS FAR AS IT WILL GO, AND PLACED OVER THE (2) STUDS WHERE THE SCISSOR JACK MOUNTING PLATE WAS LOCATED.

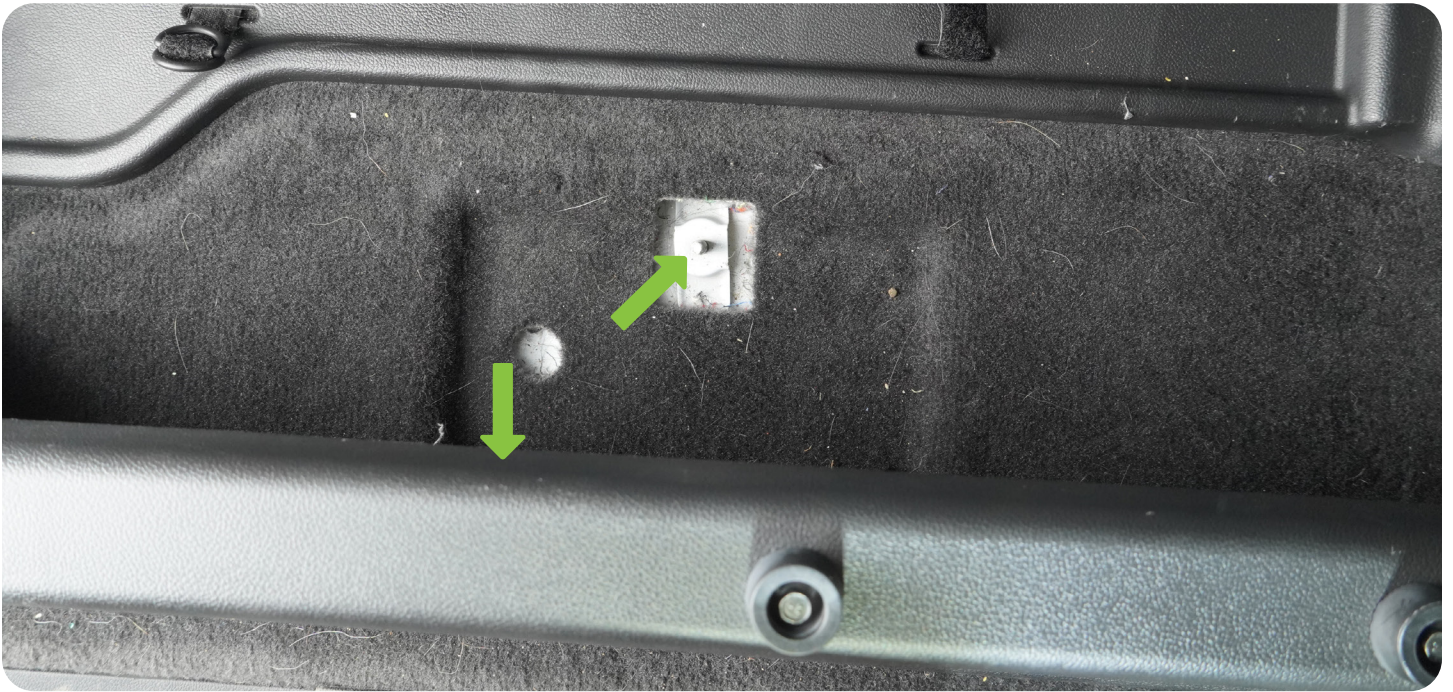

STEP 11 | USING (2) OF THE FACTORY NUTS THAT WERE REMOVED, INSTALL TO THE MOUNT. SECURE THE NUTS USING A 10MM SOCKET.



STEP 12 | WIRING WILL VARY BASED ON OWNERS PREFERENCE, SWITCH LOCATION, AND COMPRESSOR MODEL. REFER TO THE COMPRESSOR MANUFACTURE GUIDELINES TO ENSURE COMPRESSOR IS WIRED PROPERLY.



CONGRATULATIONS

YOU ARE FINISHED WITH THE INSTALL OF THE 2023+ COLORADO/CANYON
REAR SEATS COMPRESSOR MOUNT

+ SHARE YOUR PICS

WE LOVE SEEING HOW OUR CUSTOMERS USE THEIR DV8 OFFROAD PRODUCTS AND FOLLOWING ALONG WITH YOUR ADVENTURES. TAG US IN YOUR PHOTOS @DV8OFFROAD. WE ENJOY SHARING CUSTOMER PHOTOS ON OUR FEED.



+ WRITE A REVIEW

ARE YOU HAPPY WITH YOUR NEW DV8 OFFROAD PRODUCT? WE WOULD LOVE TO HEAR AND SEE YOUR EXPERIENCE. VISIT THE PRODUCT PAGE AND CLICK "WRITE A REVIEW". ADD A SHORT REVIEW AND UPLOAD A FEW PHOTOS TO BE FEATURED ON THE PRODUCT PAGE.

WWW.DV8OFFROAD.COM

+ NEED HELP?

IF YOU ARE HAVING ANY ISSUES WITH YOUR PRODUCT, PLEASE REACH OUT. DV8 OFFROAD IS A COMPANY OF OFF ROAD ENTHUSIASTS THAT DESIGN AND USE OUR OWN PRODUCTS, SO WE WANT YOU TO BE JUST AS STOKED ON YOUR NEW PARTS AS WE ARE.

P. 855.680.9595

E. SALES@DV8OFFROAD.COM

