

REAR INNER FENDERS

07-18 JEEP JK

INFEND-10RB



TOOLS REQUIRED

- Philips Head Screwdriver
- 1/8 inch Drill Bit
- Trim Tool
- Safety Glasses

SKILL LEVEL

- Novice
 - 1 (you) persons
- Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- 2.5 Hours
- Time to install this should only take about two and a half Hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

(10) 8x19mm Philips Head
Recessed Tapping screws



STEP 1 | (Passenger side install shown)

(If equipped) Remove the factory inner fenders.

Note: Removal of the wheel is not required.



STEP 2 | Place the DV8 inner fender behind the wheel as shown.



INSTALLATION MANUAL

STEP 3 | Lift the inner fender up to the body of the vehicle. Align the inner fender with the vehicles body.

NOTE: The inner fender are designed to fit against the vehicle body. The inner fender will flex while fitting into place.



INSTALLATION MANUAL



INSTALLATION MANUAL

STEP 4 | Using a marker, mark all the holes in the inner fender panel



STEP 5 | Using a 1/8 inch drill bit, drill a pilot hole for each of mounting screws.




INSTALLATION MANUAL

STEP 6 | Using a Philips head screw driver, and the provided hardware, secure the DV8 inner fender to the vehicles body.



Complete steps 1-6 on the driver side

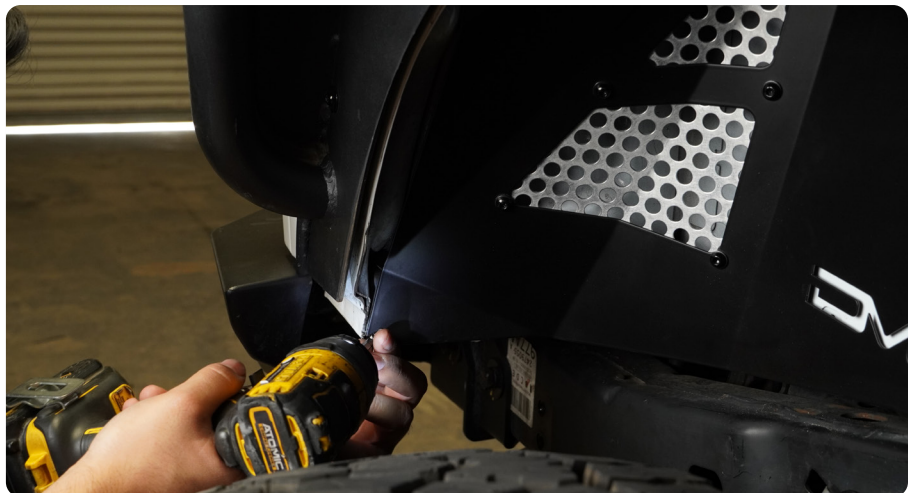

INSTALLATION MANUAL

STEP 7 | Double check that all hardware is secure.

Congratulations, installation of the DV8 JK Rear Inner Fenders is complete.

