

INNER FENDERS

22+ TOYOTA TUNDRA

INFT2-01



TOOLS REQUIRED

- Trim Clip Tool
- Needle Nose Pliers
- Philips Head Screwdriver

SKILL LEVEL

- Novice
- 1 (you)

Little skill level required, you can easily install it by yourself however, additional help will be useful.

TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (2) 14mm Push Clip
- (10) 24mm Push Clip



STEP 1 | Removing the wheel prior to install is not necessary, but it may make the install easier.



STEP 2 | Use needle nose pliers to remove the trim clips securing the front section of the factory front inner fender.

There are two clips on bottom and one on top per side.



INSTALLATION MANUAL

STEP 3 | Use a trim clip tool and needle nose pliers to remove the clips securing the rear section of the front factory inner fender.


Then, remove the inner fender.



INSTALLATION MANUAL

STEP 4 | Place the DV8 inner fender up to the vehicle and use the provided push pin the with the philips head driver with a philips head screwdriver to secure the inner fender.

Then, install the push style pins in the remaining mounting locations.

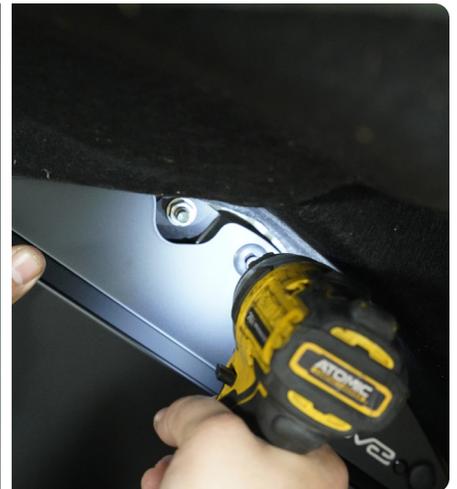

INSTALLATION MANUAL

STEP 5 | Install the remaining fender piece using the provided push style clips.

Repeat process for opposite side of the vehicle.



STEP 6 | Congrats! You are finished with the install of the 22+ Toyota Tundra Inner Fenders.

