

## ARB AIR COMPRESSOR MOUNT

2025+ TOYOTA 4RUNNER I-FORCE MAX

CMTF3-01



### TOOLS REQUIRED

- Trim tool
- #3, #4, #5 allen key/socket
- 3/8 drill bit

### SKILL LEVEL

- Novice/Intermediate
  - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1 Hour
- Time to install this should only take about one hour.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED

- (2) M8x20 allen head bolts
- (2) M8 washers
- (2) M8 spring washers
- (1) M6x45 allen head bolt
- (1) M6 washer
- (1) M6 spring washer
- (2) M5x12 countersunk flat head cap bolt

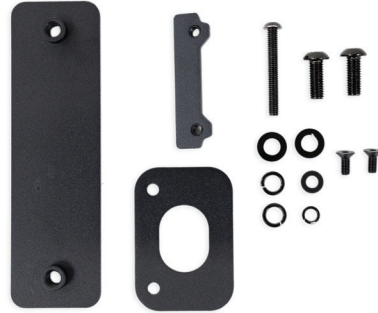

**STEP 1** | Begin by placing the mount in the vehicle on the passenger side roughly where the mount will be installed.

**Note:** This will work with the OE rear mat or without the mat.

You can choose to trim the mat along the green line, or you can mount on top of the mat without trimming, however removal of the floor mat may require loosening of the mount.



**STEP 2** | Locate the tie down and pull down the metal tab.



# INSTALLATION MANUAL

**STEP 3** | Using the pry tool, pull the plastic bolt cover tab up to expose the 10mm bolt.



**STEP 4** | Using the 10mm socket, remove the bolt.



**STEP 5** | Remove the tie down.



# INSTALLATION MANUAL

**STEP 6** | Loosely install the (2) M5 countersunk head bolts into the cover along with the nut tab.



**STEP 7** | Angle the cover in slightly to fit cover into place and then secure the two bolts using a #3 allen head until cover is centered and secure.

The nut tab and the cover should “pinch” the plastic to hold cover in place.




**STEP 8** | Place ARB bracket in vehicle and secure it with the M6x45 allen bolt pressing down against the floor so it is snug and does not “rattle”



## INSTALLATION MANUAL

**STEP 9** | Once bracket is fully secure in place with the bolt, using a marker, mark the (2) holes of the bracket on the plastic.

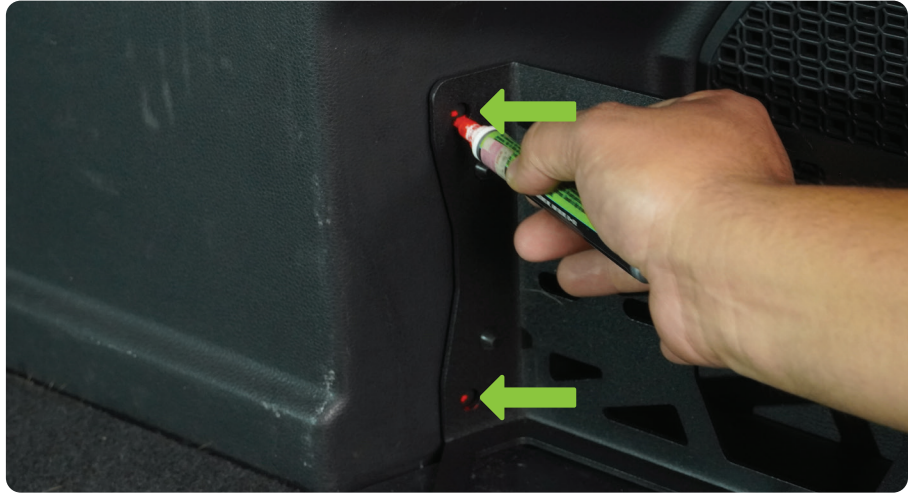


**STEP 10** | Using a pry tool, remove the top plate/cup holder from the side cubby.



# INSTALLATION MANUAL

**STEP 11** | Remove ARB bracket, exposing the (2) marked spots of where it will need to be drilled.

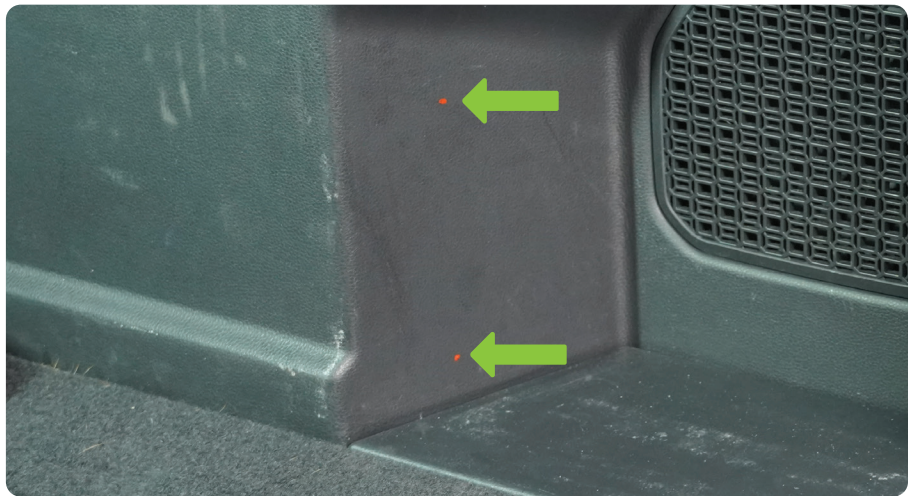

**STEP 12** | Using the 3/8 drill bit, drill out the holes you will need to secure the bracket to the panel.

*Note: Be careful and use slight pressure while drilling in to avoid damage to the panel or internal electrical items.*

*1/4" of penetration is all that is needed.*



# INSTALLATION MANUAL

## STEP 13 | Re-install ARB bracket.

Place the nut plate inside plastic cubby against the (2) drilled holes.



## STEP 14 | Install the (2) M8x20 allen bolt, washers, and split washer to secure bracket into place. Slightly tighten as to not crack the plastic.



# INSTALLATION MANUAL

**STEP 15** | Secure your compressor to the bracket using hardware provided with the compressor.

*Note: This is designed for the ARB dual compressor and the ARB Brushless dual compressor. Others may fit, however you will need to verify.*



**STEP 16** | Reinstall the tray into the panel by clicking tabs back into place.



**STEP 17** | Wiring will vary based on owners preference, switch location, and compressor model. Refer to compressor manufacture guidelines to ensure compressor is wired properly.



# INSTALLATION MANUAL

**STEP 18** | Congratulations You finished installing your DV8 ARB Air Compressor Mount.

