

Light Bar Bracket

2021+ BRONCO

LBBR-03



TOOLS REQUIRED

- 10mm Socket

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful.

TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL


STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.



STEP 2

Remove the factory accessory mount cover over the windshield by pressing the center of the top and pulling away from the Bronco.

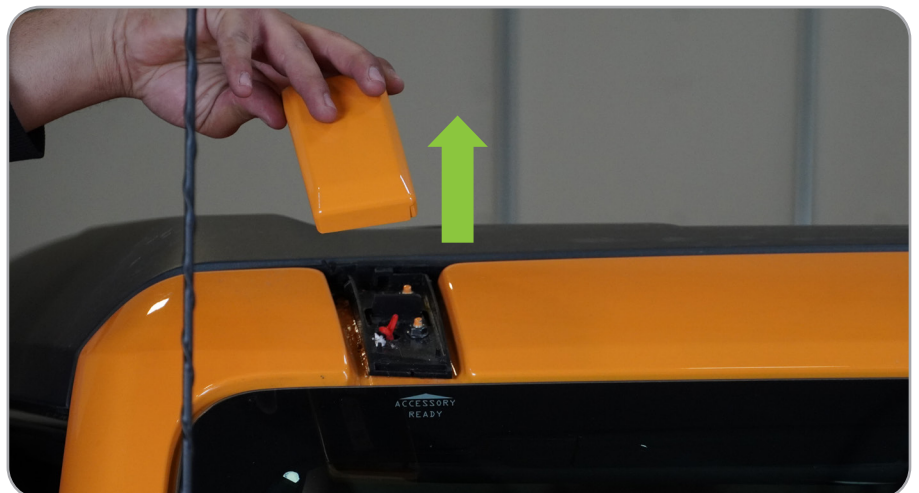


INSTALLATION MANUAL

STEP 3

Remove the black plastic structure using a 10mm socket. Keep nuts close since they will be reused.

NOTE: Refer to manual to access factory light bar wiring if bronco is equipped with auxiliary switch option.

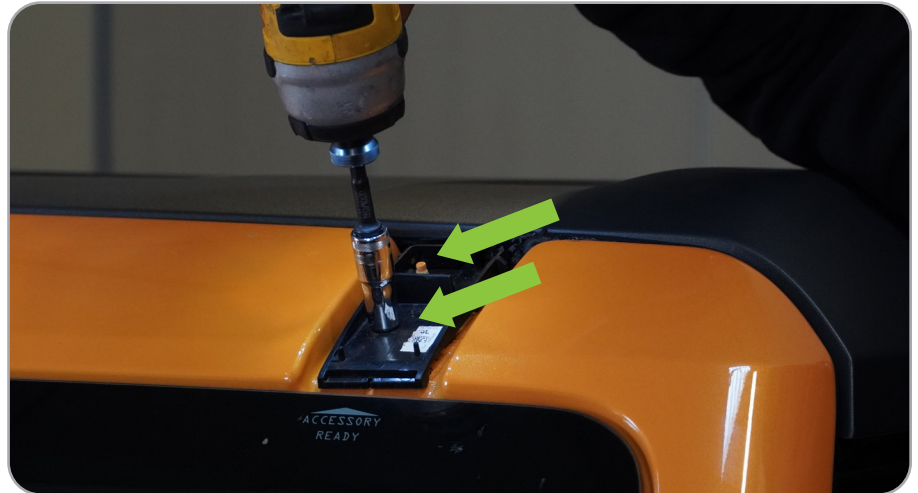

STEP 4

Our curved light bar can accept a 42" (mount to mount) curved light, or twelve 3" pods. Mount the light(s) using hardware provided with the light(s).

Some light manufacturers include hardware that is long enough to interfere with the factory windshield wipers. Shorter hardware will need to be sourced locally to remedy this issue.

Note: Shown in image is the 42" wide curved bar. We are using twelve 3" DV8 elite pods for our install.



INSTALLATION MANUAL

STEP 5

Hold the mount up to the vehicle and place onto accessory mount posts.

NOTE: While this can be done alone, we do recommend assistance to prevent any injury or damage to the vehicle.



STEP 6

Using the 10mm factory nuts, tighten mount into place until secure. Do not over tighten posts to prevent damage to threads.



STEP 7

Wiring for your light may vary depending on if the wire is directed towards the driver or passenger side of the Bronco. For this install, the wiring was on the passenger side. The wiring was affixed along of the bracket mount towards the back of the Bronco. Feed wiring as preferred or utilize factory provided wiring if applicable.



INSTALLATION MANUAL

STEP 8

Double check all hardware is secure and secure wiring as needed.

