

BRUSH BAR

2024+ TOYOTA LAND CRUISER

LBTf4-02



TOOLS REQUIRED

- 17mm socket
- Trim Tool
- Safety Glasses

SKILL LEVEL

- Novice
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about one and a half hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL


Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

Utilizes Factory



STEP 1 | Using a 17mm socket remove the (4) bolts holding on the factory recovery points.

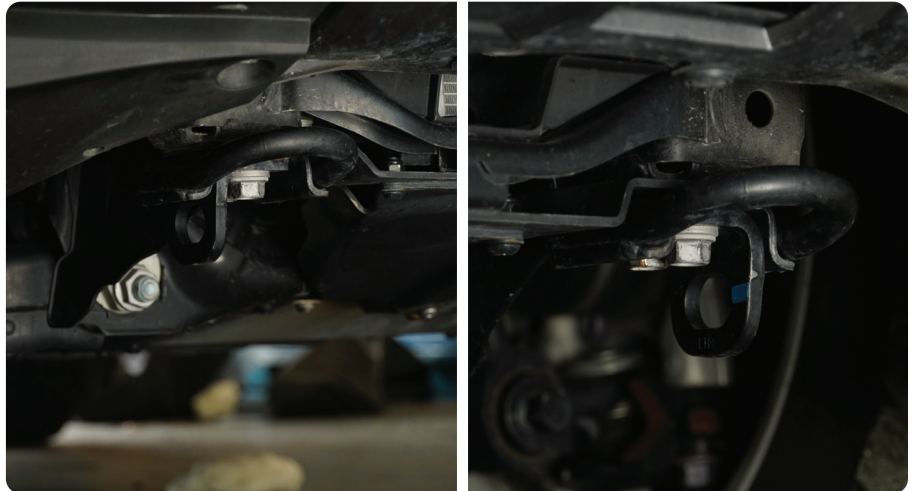

INSTALLATION MANUAL

STEP 2 | If you wish to use your factory recover hooks with the DV8 Brush Bar, use a cutting wheel to cut off the tab at the back of the recovery hook as shown.



INSTALLATION MANUAL

STEP 3 | The factory recovery hooks will need to swap positions (driverside will be used on the passenger and vice versa) in order to fit with the DV8 Brush Bar.

With assistance lift the Brush Bar to the vehicle. Secure the Brush Bar to the vehicle by sandwiching the Brush bar between the factory recover hooks and frame rail using the factory hardware and a 17mm socket.



STEP 4 | Torque bolts to factory specifications 75ft lbs.



STEP 5 | Double check that the Brush Bar is centered with the vehicle.

Congratulations you are finished with the install the DV8 Land Cruiser Brush Bar.

