

A-PILLAR LIGHT BRACKET

2024+ TOYOTA LAND CRUISER

LBTL4-01



TOOLS REQUIRED

- + 12mm Socket
- + Trim Tool
- + Cutting Tool

SKILL LEVEL

- + Novice/Intermediate
- + 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful to prevent injury or damage.

TIME REQUIRED

- + Approximately 1.5 Hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- *Always wear eye protection when operating power tools*

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

PARTS INCLUDED



STEP 1 | USING THE TRIM TOOL, CAREFULLY REMOVE THE WINDSHIELD COWL SIDE PANEL.




STEP 2 | USING THE TRIM TOOL, CAREFULLY REMOVE THE WINDSHIELD COWL COVER.



STEP 3 | ON THE COWL COVER, CUT THE SEAL PORTION OF THE COVER AS SHOW. DO NOT FULLY CUT THE COVER SEAL (NEXT PICTURE).



STEP 4 | AFTER CUT, CREATE A SMALL CUT ON THE EDGE OF THE COVER. START OFF AT 1/4" (QUARTER INCH). MAKE THE FINAL CUT OR FITMENTS ONCE THE BRACKET IS INSTALLED AND THE POD LIGHTS WIRING IS COMPLETED.

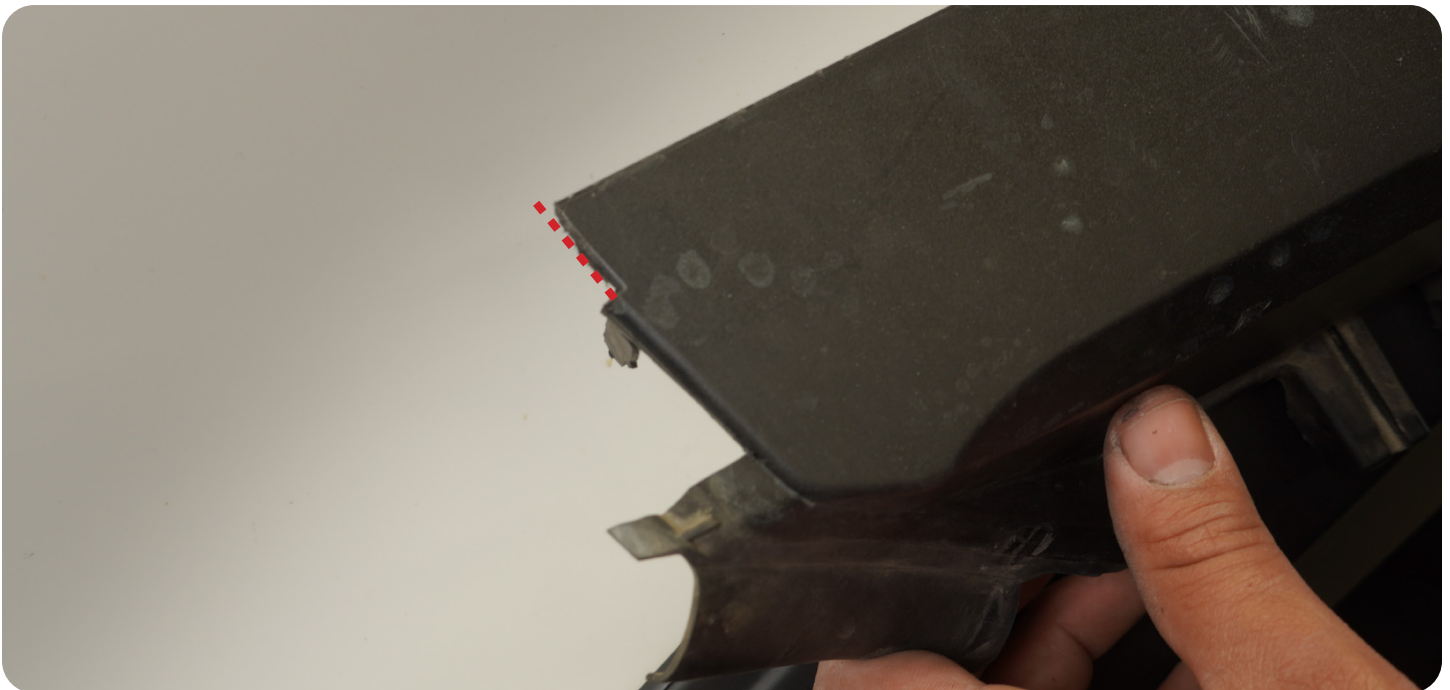

STEP 5 | AFTER MODIFICATION, REINSTALL THE COWL COVER AND COWL COVER SIDE PANEL.



STEP 6 | SETTING THE BRACKETS ON A WORK TABLE OR A SOFT SURFACE



STEP 7 | USING THE HARDWARE PROVIDED WITH THE POD LIGHT(S), INSTALL AND SECURE THE POD LIGHT(S).



STEP 8 | LIFT THE HOOD UP AND HOLD IT UP USING THE HOOD PROP. USING A 12MM SOCKET, LOOSEN THE (2) FACTORY BOLTS ON THE HOOD BRACKET.

NOTE: DO NOT REMOVE BOLTS AS IT CAN MISALIGN HOOD OR CAUSE A WARP ON THE HOOD AND DAMAGE IT.



STEP 9 | PLACE THE POD LIGHT BRACKET BEHIND THE HOOD AND UNDER. PLACING THE BRACKET BETWEEN THE BOLT AND THE BRACKET. PUSH INTO PLACE.






STEP 10 | START BY USING A TRIM TOOL TO REMOVE ADAPTIVE CRUISE CONTROL COVER (IF ACC EQUIPPED VEHICLES)

NOTE: YOU WILL NEED TO USE OUR ACC RELOCATION BRACKET ABFF-02 TO REINSTALL THE ACC SENSOR.



STEP 11 | ONCE INSTALLED, CAREFULLY LOWER HOOD AND CONFIRM THAT THERE IS ROOM ON THE COWL COVER AND BRACKET. MAKE ADJUSTMENTS TO THE BRACKET OR TRIMMING THE COVER ACCORDINGLY.

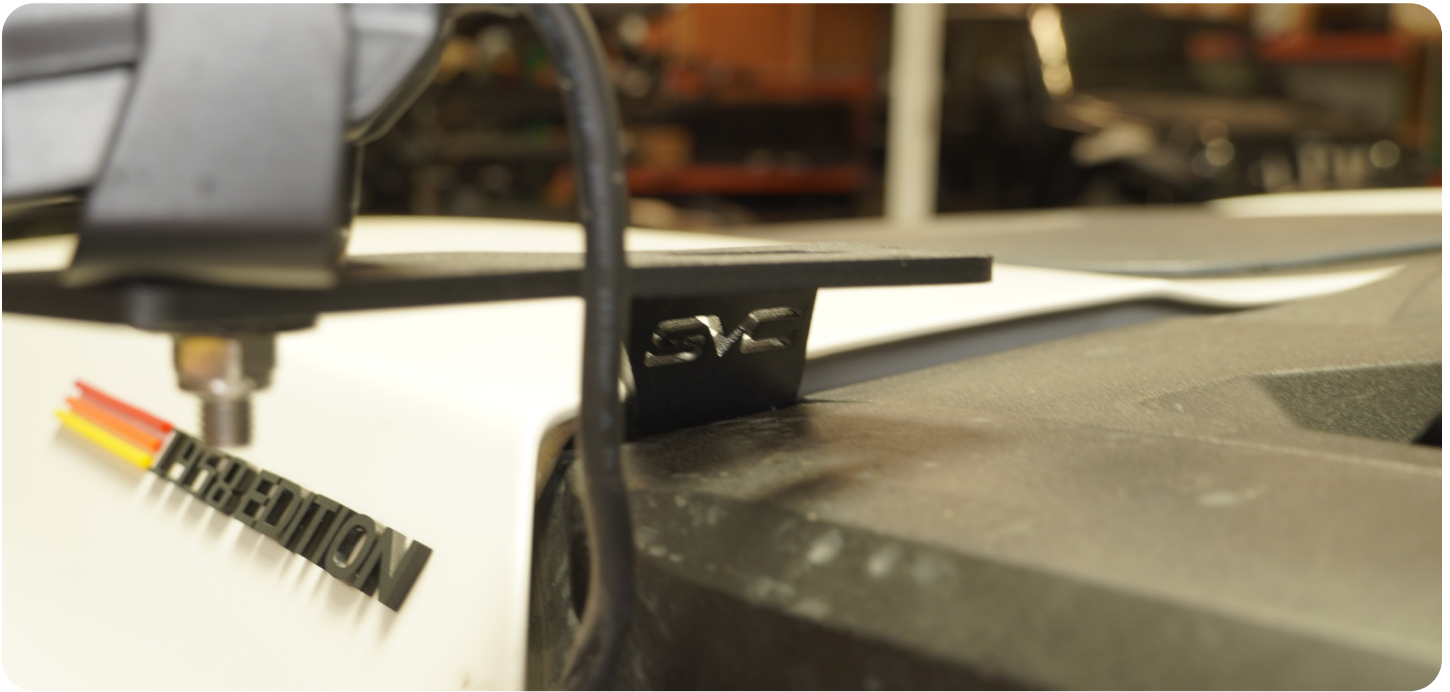

STEP 12 | WIRE POD LIGHTS AND MAKE SURE ALL LIGHTS AND HOOD BOLTS ARE SECURED.



CONGRATULATIONS

YOU ARE FINISHED WITH THE INSTALL OF THE LC250 DITCH LIGHT BRACKETS.

+ SHARE YOUR PICS

WE LOVE SEEING HOW OUR CUSTOMERS USE THEIR DV8 OFFROAD PRODUCTS AND FOLLOWING ALONG WITH YOUR ADVENTURES. TAG US IN YOUR PHOTOS @DV8OFFROAD. WE ENJOY SHARING CUSTOMER PHOTOS ON OUR FEED.



+ WRITE A REVIEW

ARE YOU HAPPY WITH YOUR NEW DV8 OFFROAD PRODUCT? WE WOULD LOVE TO HEAR AND SEE YOUR EXPERIENCE. VISIT THE PRODUCT PAGE AND CLICK "WRITE A REVIEW". ADD A SHORT REVIEW AND UPLOAD A FEW PHOTOS TO BE FEATURED ON THE PRODUCT PAGE.

WWW.DV8OFFROAD.COM

+ NEED HELP?

IF YOU ARE HAVING ANY ISSUES WITH YOUR PRODUCT, PLEASE REACH OUT. DV8 OFFROAD IS A COMPANY OF OFF ROAD ENTHUSIASTS THAT DESIGN AND USE OUR OWN PRODUCTS, SO WE WANT YOU TO BE JUST AS STOKED ON YOUR NEW PARTS AS WE ARE.

P. 855.680.9595

E. SALES@DV8OFFROAD.COM

