


FRONT BUMPER CENTER LICENSE PLATE BRACKET

21+ FORD BRONCO

LPBR-01

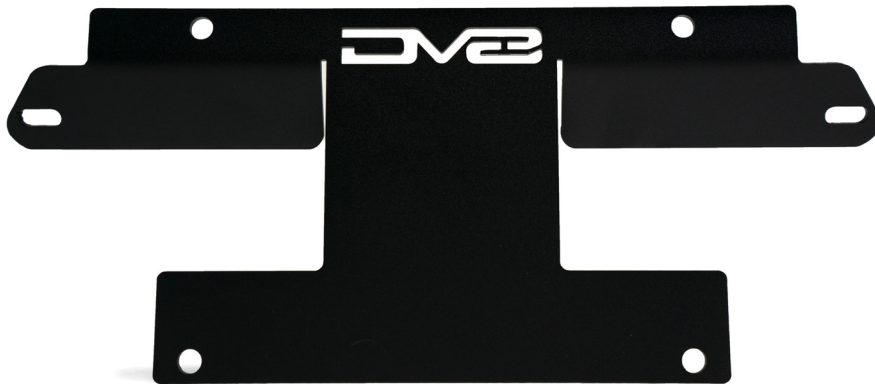

TOOLS REQUIRED

- T40 Plus Bit (T40 regular is okay also)
- 10mm Wrench
- #4 Allen Tool
- #5 Allen Tool

SKILL LEVEL

- Novice/Intermediate
- 1 Person

Little skill level required, you can easily install it by yourself however, additional help will be useful.

TIME REQUIRED

- .5 Hours

Time to install this should take approximately .5 Hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED


- (4) M6x15mm Allen
- (4) M6x12 Allen
- (4) M6 Lock Nuts
- (8) M6 Flat Washer
- (2) M8 x 40mm Allen
- (2) M8 Flat Washers
- (2) 22mm Spacers



STEP 1 | Modular Bumper Owners:
Begin by removing three factory bolts from the bumper using a T40.

The middle bolt will not be re-used during install.

Raptor owners: Remove the (2) factory bolts, as shown in the second image on this page.

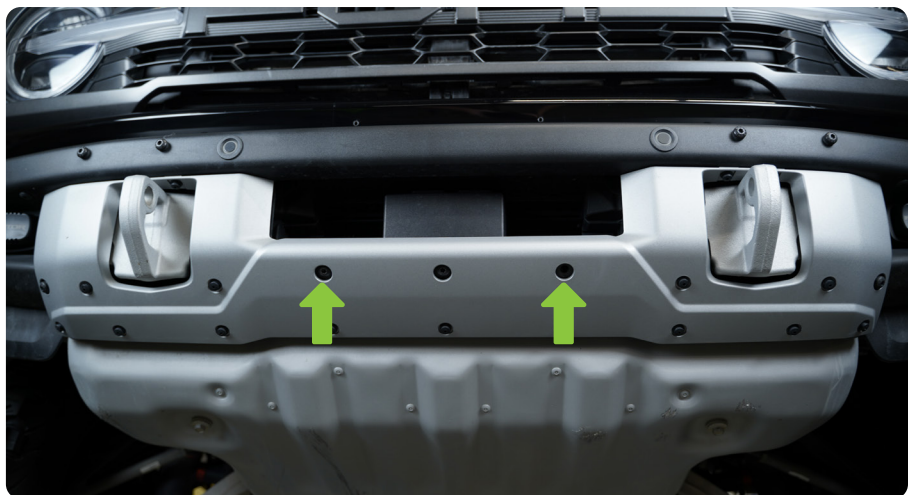

INSTALLATION MANUAL

STEP 2 | Secure the license plate loosely to the bracket using only the top two mounting holes with provided M6 hardware.

We provide two different lengths of M6 hardware for different applications. If you are not running a license plate frame, we recommend using the shorter M6 hardware.

Thread the nut on by hand and leave hanging loosely.



INSTALLATION MANUAL

STEP 3 | Non-Raptor owners: Secure the bracket to the bumper loosely by threading (2) of the factory bolts through the DV8 license plate mount and into the factory bumper by hand.

While pushing up on the bracket, secure the factory hardware with a T40 plus or T40 regular bit.

Alternate between hardware to ensure the bracket is seated evenly.



STEP 4 | Raptor owners: Use the provided spacers and M8x40mm hardware to loosely secure the bracket to the bumper. (1 spacer & 1 M8 flat washer per M8x 40 Allen head bolt)

While pushing up on the bracket, secure the M8 hardware using an #5 Allen tool.

Note: M8 hardware and Spacers are used on Bronco Raptor models only.



INSTALLATION MANUAL

STEP 5 | While pushing up on the license plate, secure the M6 license plate hardware with a 4mm Allen bit and 10mm wrench.

When done correctly, there will be 1-2mm of clearance between the hardware and bumper.



STEP 6 | Congrats! You are finished with the install of the 21+ Ford Bronco Front Bumper Center License Plate Mount.

