


CAPABLE BUMPER LICENSE PLATE MOUNT

21+ FORD BRONCO
LPBR-05

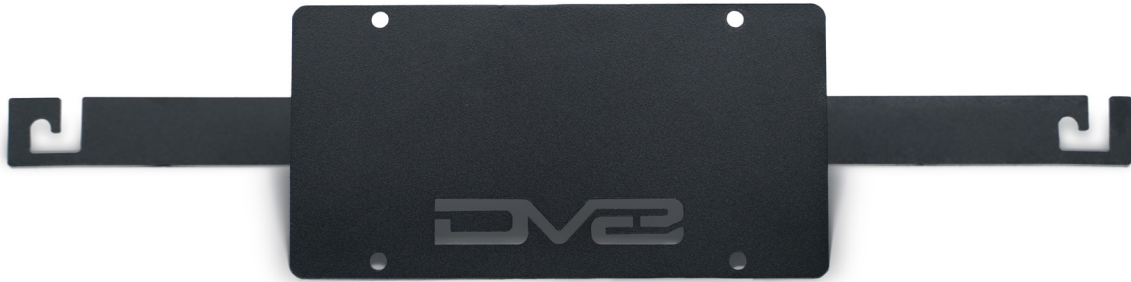

TOOLS REQUIRED

- 8, 10, 13mm Wrench
- 3, #4 Allen Bit

SKILL LEVEL

- Novice/Intermediate
- 1 (you)

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.


HARDWARE INCLUDED

- | | |
|-------------------------|------------------------|
| (4) M6x15 Allen | (2) M5 Nylon Lock Nuts |
| (8) M6 Flat Washers | (2) M5 Nut Caps |
| (4) M6 Nylon Lock Nuts | |
| (2) M5x14 Tapered Allen | |
| (2) M5 Flat Washers | |



STEP 1 | Use a #3 allen bit and 8mm wrench to secure the license plate to the bracket.

Then, install the nut caps onto the exposed nuts by pressing them into place.

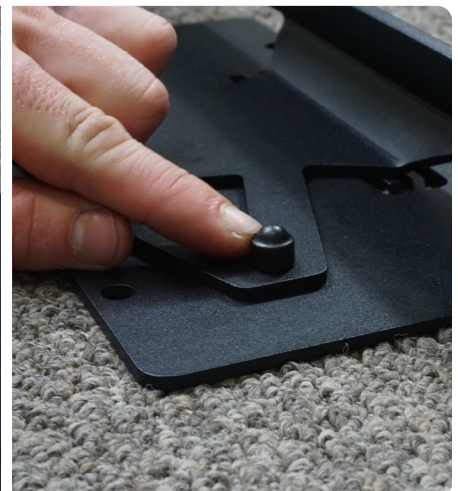

INSTALLATION MANUAL

STEP 2 | Use a #4 allen bit and 10mm wrench to secure the license plate to the bracket.



STEP 3 | Use a 10mm wrench to loosen the two factory bolts located between the bumper and skid plate, directly below the two front inner sensors on the bumper.

Loosen them until they are *almost* completely removed, but leave a few threads engaged.



INSTALLATION MANUAL

STEP 4 | Hook one side of the bracket to the first bolt and swing the other side up into place.



STEP 5 | When the bracket is pushed up into place, slide it to the driverside and then pull it down to seat it into place.



INSTALLATION MANUAL

STEP 6 | Use a 13mm wrench to secure the factory hardware.



STEP 7 | Congrats! You are finished with the install of the 21+ Bronco Capable Bumper License Plate Bracket.

