


GRAB N' GO MOLLE POCKET

21+ FORD BRONCO

MPBR-03

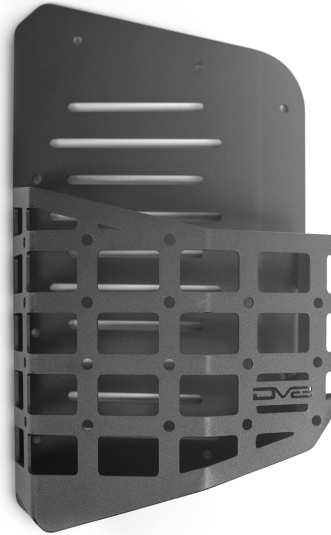

TOOLS REQUIRED

- Trim Clip Tool
- #4 Allen Bit
- 17/64" Drill Bit
- Sharpie/Marker

SKILL LEVEL

- Novice
- 1 (you)

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (8) M6x20 Allen
- (8) M6 Flat Washers
- (8) M8 Serrated Nuts

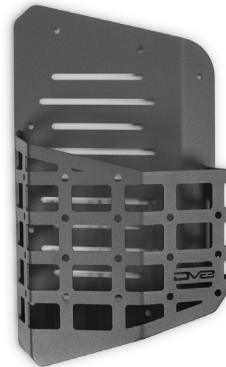

STEP 1 | Prior to beginning the install guide, read through the guide completely to see how the factory panel is removed.

Take note of the style and location of each clip and the order and process in which they are removed.


It must be removed carefully using the below steps. Deviating from the steps may result in broken trim clips.

If any of the factory trim clips break, finishing installation may be very difficult and it may impact the sturdiness of the Grab n' Go Pocket.



INSTALLATION MANUAL

STEP 2 | Looking at the interior of the tailgate, there are three push style clips located along the left edge of the trim panel.

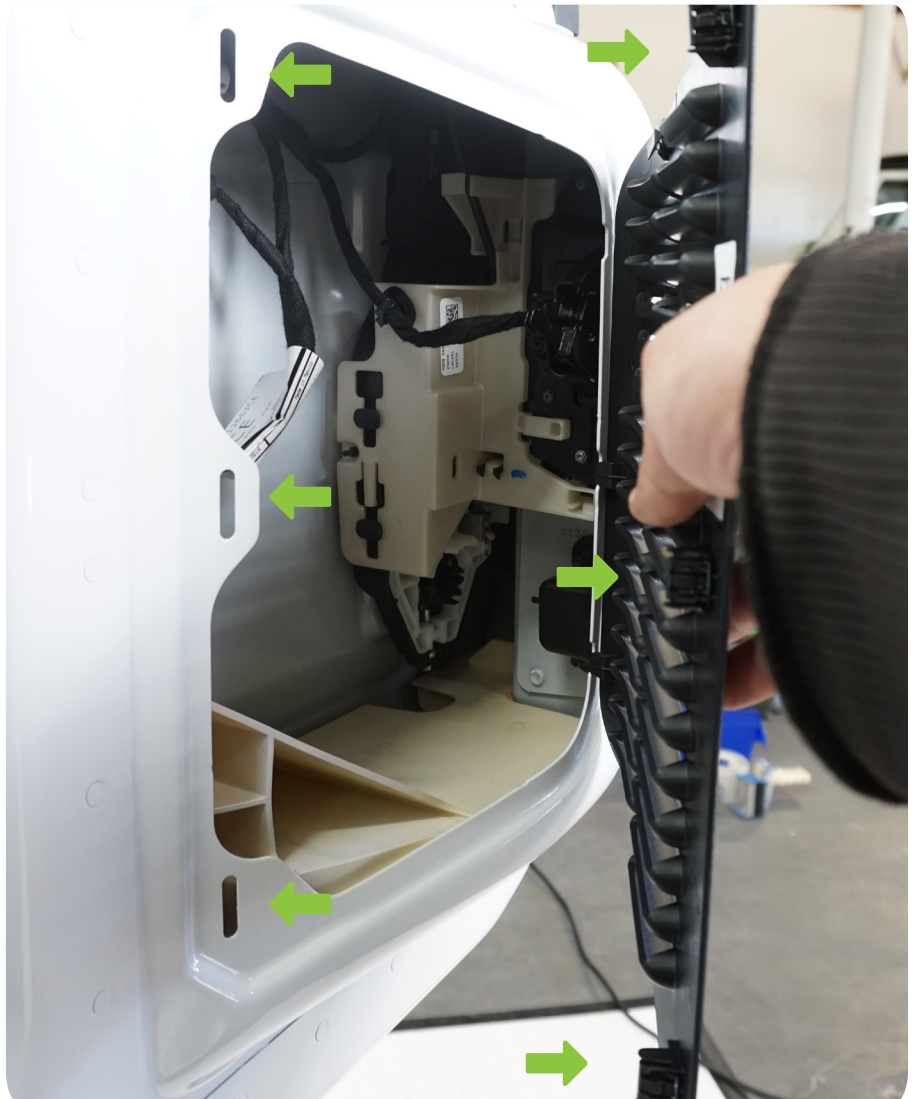


INSTALLATION MANUAL

STEP 3 | There is one latch clip which slips behind the metal lip on the right side of the top edge.


Pictured on the right is a broken latch clip and unbroken latch clip for reference..

A broken latch clip like this will occur when you release the three push clips along the left side of the trim and remove the panel incorrectly.

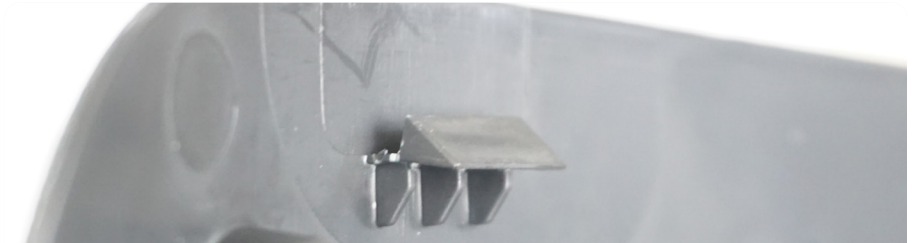

INSTALLATION MANUAL

STEP 4 | There are two hinge like clips located along the right edge of the trim panel towards the middle and bottom.

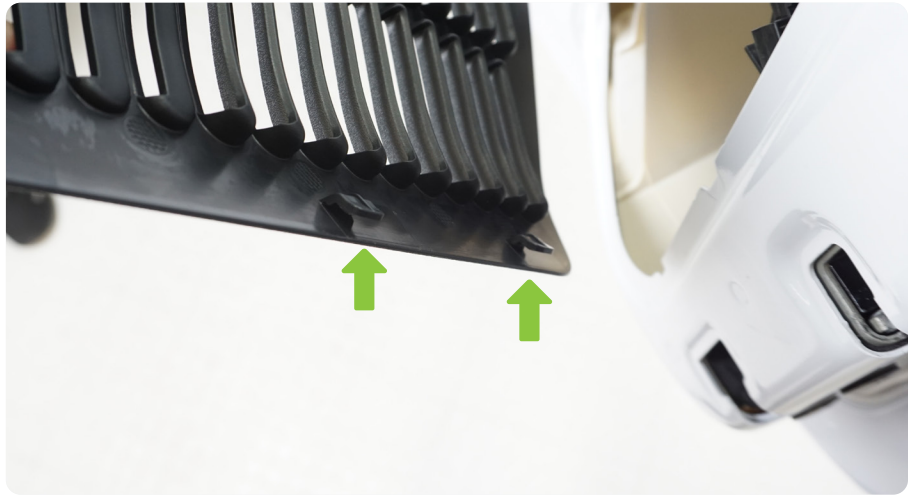

INSTALLATION MANUAL

STEP 5 | To remove the panel correctly, without breaking and clips, use a trim clip tool carefully remove the push clips located along the left edge. Pictured in step 1.

It may be necessary to start at the top or bottom corner in order to get the tool underneath the trim. Just be sure to shift it to left edge as soon as its under the trim.

As the clips are released, **DO NOT PULL THE PANEL AWAY FROM THE TAILGATE.**

Notice in the second picture how as the clips are released, a second hand is being used to hold the panel close to the tailgate to avoid breaking the latch clip.

Gently slide panel down and to the left once the push clips are unfastened.

Note: It may be helpful to have a second person apply pressure to the right edge and upper right corner while working to unfasten the push clips.



INSTALLATION MANUAL

STEP 6 | Lay the pocket over the factory trim and align them.



STEP 7 | Mark the mounting holes using a sharpie, and do not let the pocket and panel shift.



STEP 8 | Remove the pocket, and using a 17/64" drill bit, carefully drill the marked mounting holes.



INSTALLATION MANUAL

STEP 9 | Using the provided M6 hardware with a #4 allen bit, secure the pocket to the trim.



STEP 10 | To re-install the trim panel, guide it gently up and to the right until they latch and hinge clips slip behind the metal edge.

Then press the push clips into place by pressing the left side of the trim. Use force to ensure they are clipped in securely.



INSTALLATION MANUAL

STEP 11 | Congrats! You are finished with the install of the 21+ Bronco Grab N' Go Molle Pocket.

