


MOLLE DOOR POCKET (REAR)

21+ BRONCO (4-DOOR)

MPBR-06

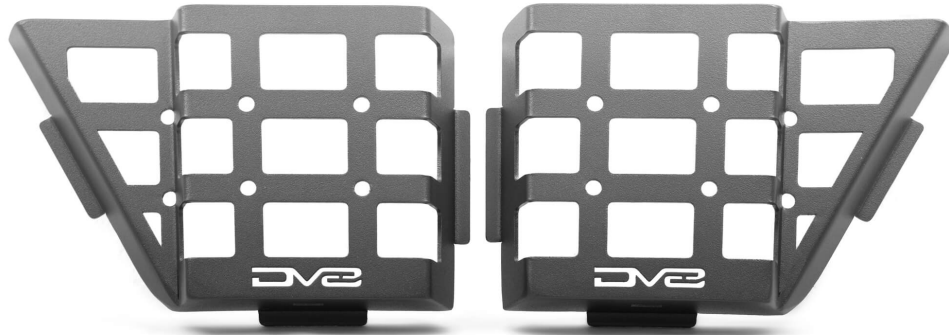

TOOLS REQUIRED

- Boxcutter/Scissors/Similar
- Philips Head Bit
- Trim Clip Tool or Flat Head Screwdriver

SKILL LEVEL

- Novice
- 1 (you)

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

(4) Self Tapping Screws

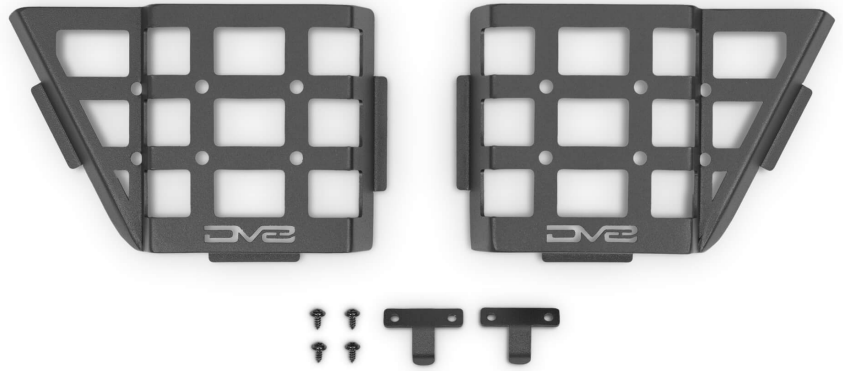

STEP 1 | Using scissors or a blade, carefully cut the netting off the vehicle.

Pull on the netting while cutting to ensure all the netting is removed during this process.



STEP 2 | Removal of the remaining elastic bungie is optional.

Remove or leave it according to your preference.



INSTALLATION MANUAL

STEP 3 | Slide the front most tab in between the trim where the netting was removed.

Then insert the bottom and remaining side tab.

For the last tab, it may be helpful to use a trim clip tool to create a small gap in the trim, to seat it easier.



INSTALLATION MANUAL

STEP 4 | Once the pocket is fully seated, install the hold-down bracket using the provided self tapping screws with a philips head screwdriver.



STEP 5 | Repeat for the opposite side of the vehicle.



STEP 6 | Congrats! You are finished with the install of the 21+ Bronco Rear Molle Door Pocket

