


REAR WINDOW MSP

07-18 JEEP WRANGLER JK

MPJK-02

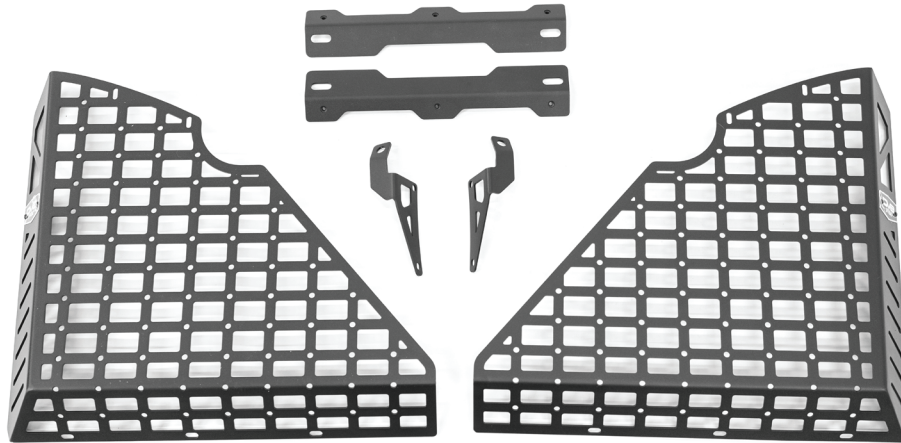

TOOLS REQUIRED

- T40, T50 Torx socket
- #4 Allen socket/wrench
- 10mm wrenches
- 10mm socket
- Trim Tool
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about one and half hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (10) M6x16 allen head bolts
- (6) M6 spring washers
- (14) M6 washers
- (4) M6 nylon lock nuts
- (2) Nylon spacers



STEP 1 | Remove the plastic cover, exposing the T50 torx bolt holding the seat belt up in place.

Note: A pry tool may help to remove plastic cover.



INSTALLATION MANUAL

STEP 2 | Using a T50 torx socket, remove the bolt holding the top portion of the seat belt.



STEP 3 | Use the nylon spacer provided and install on factory seatbelt bolt. Place the molle mounting bracket behind the nylon spacer.



STEP 4 | Bolt on the seat belt assembly and bracket to the pillar.

See image for bracket orientation for passenger side.



INSTALLATION MANUAL

STEP 5 | Remove the (2) bolts on the side panel using a T40 torx socket.



STEP 6 | Install the bottom bracket reusing the stock bolt and secure it in place. Both lower brackets are identical so they can be used on either side.

Note: If you expect to remove the hardtop often, this bracket can be installed between the body and hardtop.




INSTALLATION MANUAL

STEP 7 | Place the molle panel against the upper and lower brackets. Ensure the bottom portion sits against the lower side of the bottom bracket.



STEP 8 | Loosely install the bottom (3) M6x16 bolts, spring washers, and washer

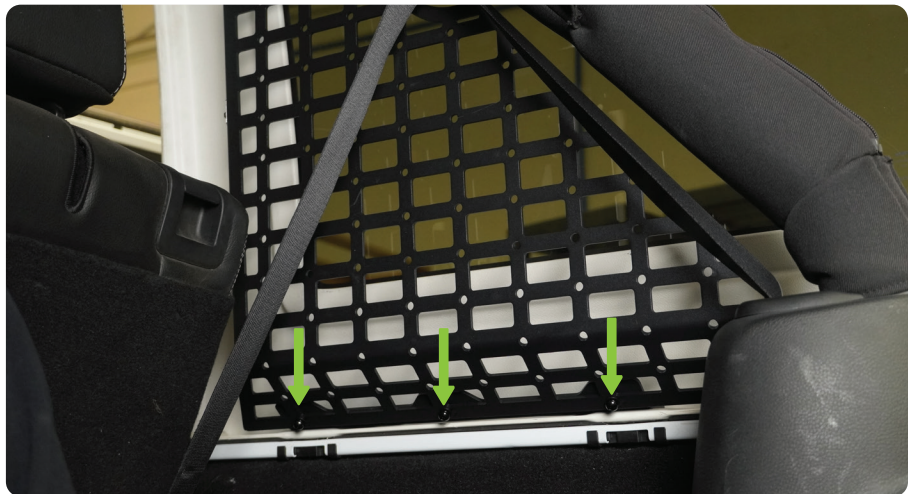

STEP 9 | Loosely install the top (2) M6x16 bolt, washer, and nuts.



INSTALLATION MANUAL

STEP 10 | Align your molle panel and the upper bracket and using a 10mm wrench and #4 allen, secure until tight.



STEP 11 | Once top bracket is secure, tighten lower bracket using #4 allen head socket.



STEP 12 | Secure your seat belt bolt to factory specifications. Install the plastic covering back on top of the seat belt assembly.





STEP 13 | Repeat process for the other side and make sure all the panels are properly secured to avoid rattling.

Congratulations! The installation of your DV8 JK Rear Molle panels are complete.

