


## MOLLE DOOR POCKET (FRONT)

18+ WRANGLER JL

20+ GLADIATOR JT

MPJL-05

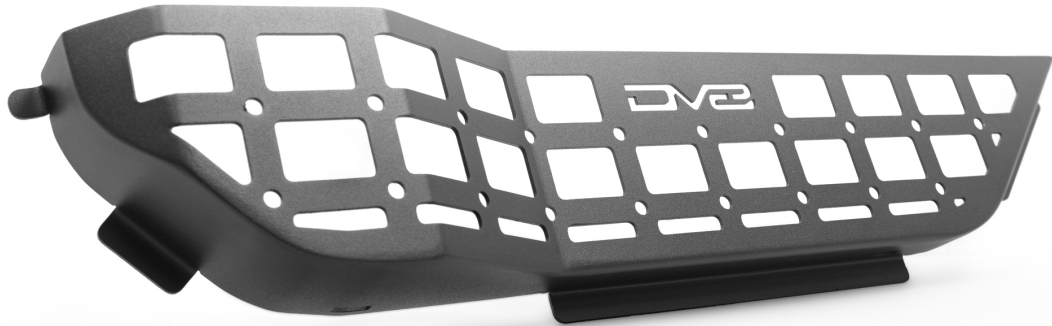

### TOOLS REQUIRED

- T-15 Torque head socket
- Preferred Cutting Tool

### SKILL LEVEL

- Novice/Intermediate
- 1 (you)

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools


*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

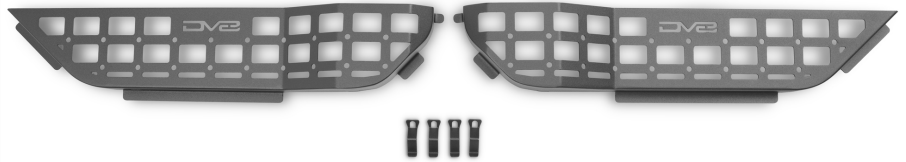

**STEP 1** | Using your preferred cutting tool, cut away the factory door pocket netting, leaving the top elastic band in place.



# INSTALLATION MANUAL

**STEP 2** | Optional: If you would like to remove the elastic band and netting use a pair of Needle Nose Pliers to grip the elastic band, pull on the band/netting until guide wire can be seen.

Remove the guide wire, netting and elastic band.






# INSTALLATION MANUAL

**STEP 3** | Slide the DV8 door Molle Pocket tabs behind the factory door pocket plastic





**STEP 4** | Using a T15 Torx Bit, remove the (2) factory door pocket screws and set aside.

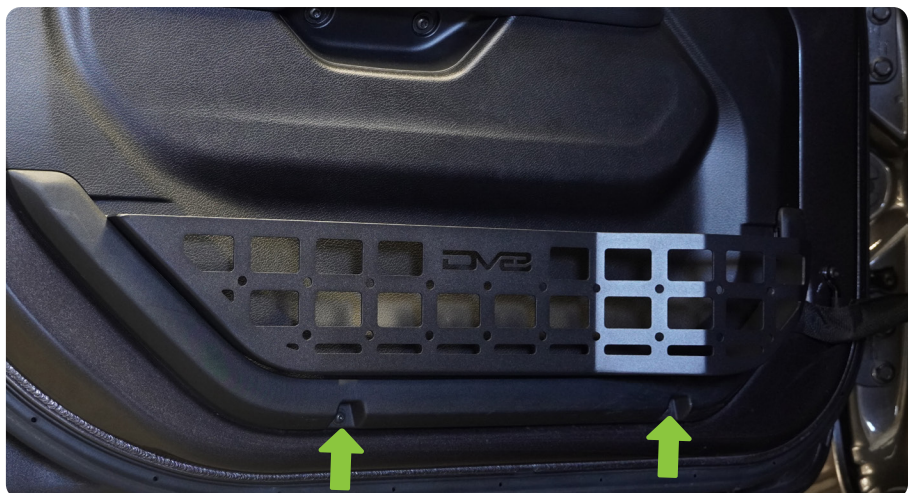

# INSTALLATION MANUAL

**STEP 5** | Using the (2) provide hold down brackets and factory hardware, secure the DV8 Molle Pocket in place.

Ensure the bottom of the hold down bracket is flush with the factory door pocket trim.

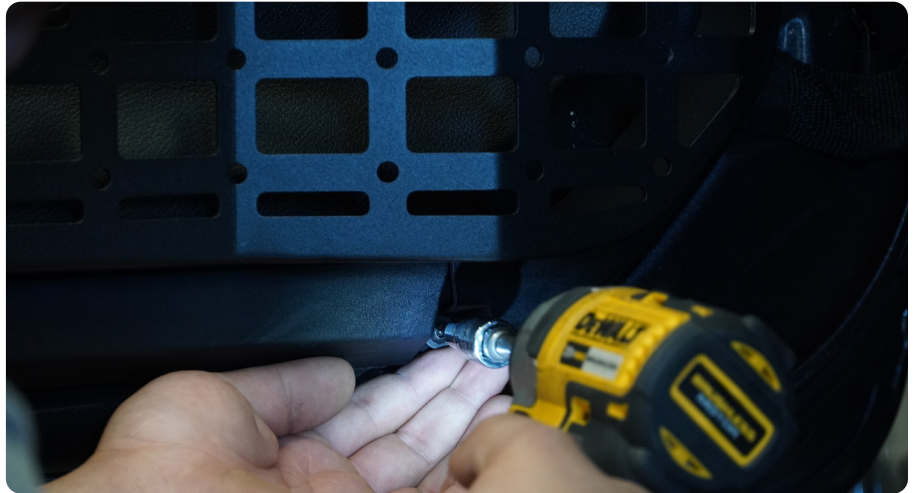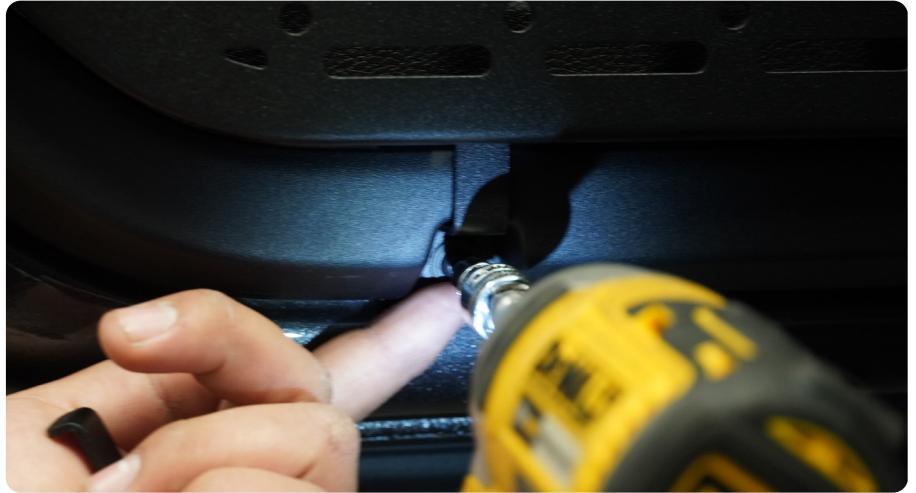

**STEP 6** | Ensure all hardware is secure.

Congratulations Installation of the DV8 Molle Pockets is now complete.

