

BAJA DESIGN LIGHT BRACKETS FOR DV8 ROOF RACK

RRLB-01L



TOOLS REQUIRED

- + 10mm socket
- + #4, 5/32", 3/16" Allen tool/socket
- + 10mm wrench

SKILL LEVEL

- + Novice/Intermediate
- + 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful to prevent injury or damage.

TIME REQUIRED

- + Approximately 1 Hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

HARDWARE INCLUDED


Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.



(4) M6x20 Allen
Bolts



(4) M6 Nylock
Nuts



(8) M6 Flat
Washers



(4) 1/4-20x1 Head
cap screw

PARTS INCLUDED



STEP 1 | USING A 3/16" ALLEN SOCKET, REMOVE THE (4) BOLTS HOLDING TO THE TWO END BRACKETS.



STEP 2 | USING THE 5/32" ALLEN SOCKET, REMOVE THE (2) BOLTS ON THE BRACKET, REMOVE THE BRACKET.




STEP 3 | USING (2) M6X20 BOLTS, WASHER, AND NUTS, LOOSELY INSTALL THE LIGHT BAR BRACKET TO YOUR ROOF RACK LIGHT MOUNT.



STEP 4 | PLACE THE LIGHT BAR TO THE ROOF RACK LIGHT MOUNT. LOOSELY INSTALL THE (2) 1/4-20 HEAD CAP SCREW TO THE MOUNTS.



STEP 5 | ALIGN THE LIGHT BAR FORWARD/BACKWARD AND SECURE YOUR BRACKET BOLTS TO THE ROOF RACK LIGHT MOUNT.

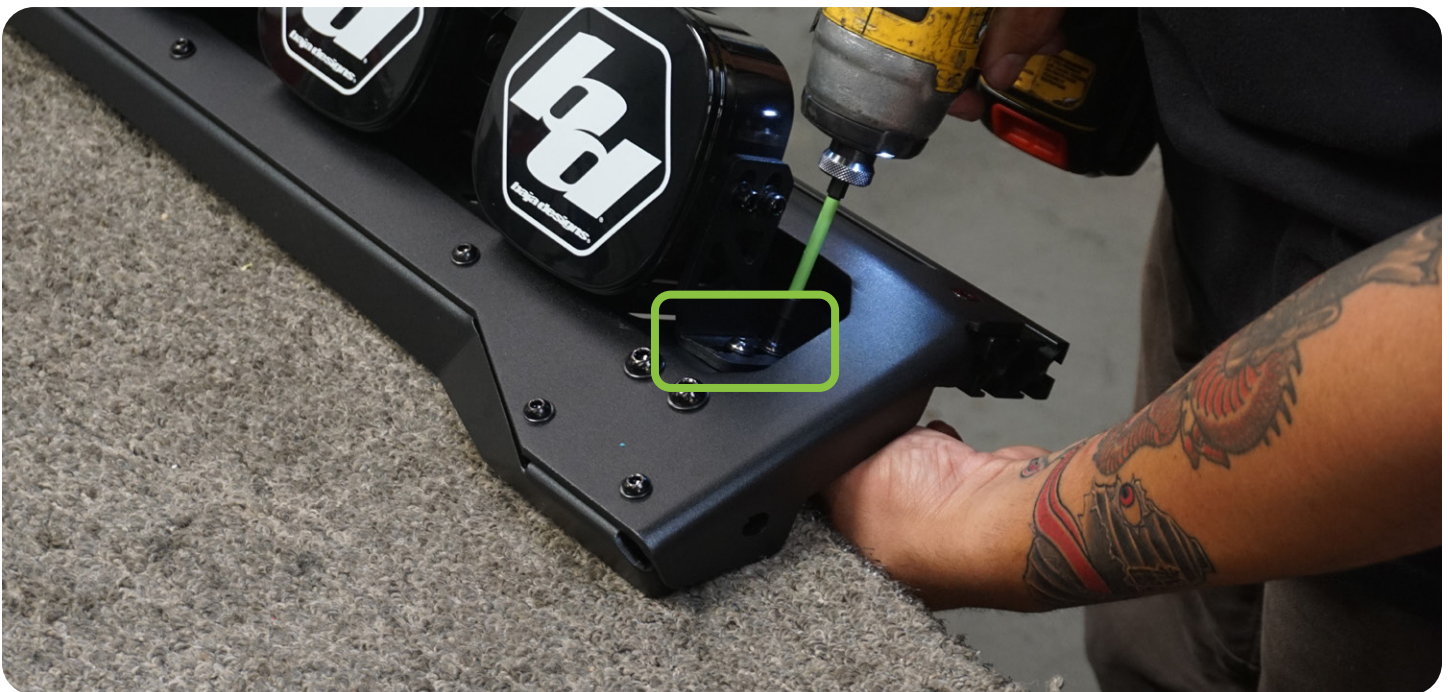

STEP 6 | ONCE ALIGNED, SET HEIGHT PREFERENCE AND SECURE YOUR BOLTS USING A #4 ALLEN SOCKET.



STEP 7 | DOUBLE CHECK THAT ALL HARDWARE IS SECURE, ALL ELECTRICAL HARNESSES HAVE BEEN RECONNECTED, AND LIGHT BAR IS ALIGNED TO THE VEHICLE.



CONGRATULATIONS

YOU ARE FINISHED WITH THE INSTALL OF THE BAJA DESIGN LIGHT BRACKETS FOR DV8 ROOF RACK.

+ SHARE YOUR PICS

WE LOVE SEEING HOW OUR CUSTOMERS USE THEIR DV8 OFFROAD PRODUCTS AND FOLLOWING ALONG WITH YOUR ADVENTURES. TAG US IN YOUR PHOTOS @DV8OFFROAD.WE ENJOY SHARING CUSTOMER PHOTOS ON OUR FEED.



+ WRITE A REVIEW

ARE YOU HAPPY WITH YOUR NEW DV8 OFFROAD PRODUCT? WE WOULD LOVE TO HEAR AND SEE YOUR EXPERIENCE. VISIT THE PRODUCT PAGE AND CLICK "WRITE A REVIEW". ADD A SHORT REVIEW AND UPLOAD A FEW PHOTOS TO BE FEATURED ON THE PRODUCT PAGE.

WWW.DV8OFFROAD.COM

+ NEED HELP?

IF YOU ARE HAVING ANY ISSUES WITH YOUR PRODUCT, PLEASE REACH OUT. DV8 OFFROAD IS A COMPANY OF OFF ROAD ENTHUSIASTS THAT DESIGN AND USE OUR OWN PRODUCTS, SO WE WANT YOU TO BE JUST AS STOKED ON YOUR NEW PARTS AS WE ARE.

P. 855.680.9595

E. SALES@DV8OFFROAD.COM

