

SHOCK/LINK SKID PLATE

07-18 JEEP JK

SPJK-04



TOOLS REQUIRED

- 18mm, 19mm, 21mm, 22mm wrenches
- 18mm, 19mm, 21mm, 22mm sockets
- Rubber mallet

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours

Time to install this should only take about one and half hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- | | |
|--|-------------------------|
| (2) M14x110x35 Hex Bolts (half thread) | (2) M12 Nylon Lock Nuts |
| (2) M14 Nylon Lock Nuts | (4) M12 Flat Washers |
| (4) M14 Flat Washers | |
| (2) M12x80x30 Hex Bolts (Half Thread) | |

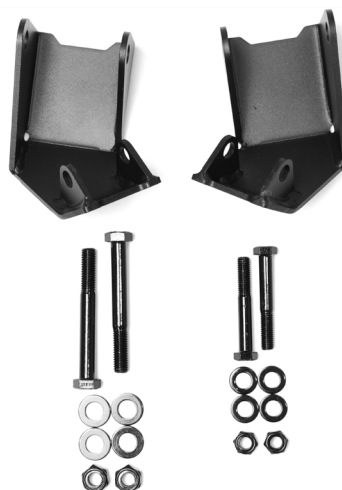

STEP 1 | Using a 19mm socket and 19mm wrench, remove the shock mounting bolt.

Using a 21mm socket and 22mm wrench, remove the lower link bolt.

Tech Tip: Now is a great time to clean up/ touch up any surface rust.



STEP 2 | Place the DV8 shock/link skid plate under the factory lower shock mount/link mount as shown.

Thread the provided M12 hex bolts through skid plate and shock.

Use (1) M12 flat washer on each side of the skid plate.

Note: You may need to tap the skid plate up into place fully using a rubber mallet.



INSTALLATION MANUAL



STEP 3 | Thread the provided M14 hex bolt through the skid plate and rear link.



STEP 4 | Torque the M14 link bolt using a 21 and 22mm socket/wrench and M12 shock bolt using a 18 and 19mm socket/wrench to factory specs.



INSTALLATION MANUAL

STEP 5 | Double check that all hardware is secure.

Congratulations, installation of the DV8 JK shock/rear link skid plate is complete.

