

A-ARM SKID PLATE

24+ TOYOTA TACOMA

SPTT1-05



TOOLS REQUIRED

- 13mm Wrench (Ratchet wrench recommended)
- Trim Pry Tool
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hour
- Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (4) M8x105x25 Carriage Bolt
- (2) M8x110x25 Carriage Bolt
- (6) M8 Nylon Lock Nuts
- (6) M8 Flat Washers



STEP 1 | Remove the factory plugs from the A-arm as shown with a flat head screw driver or a trim tool.



STEP 2 | Place the DV8 A-Arm skid plate against the bottom of the A-Arm while aligning the skid plate bolt holes with the holes in the A-Arm.


To hold the skid plate in place, use a 13mm wrench to loosely secure one of the provided M8 carriage bolts using the provided flat washer and nylon lock nut.

Note: The DV8 logo should be facing forward.





STEP 3 | Install the other (2) M8 carriage bolts and secure them in place using a 13mm wrench and the provided M8 flat washer and nylon lock nut

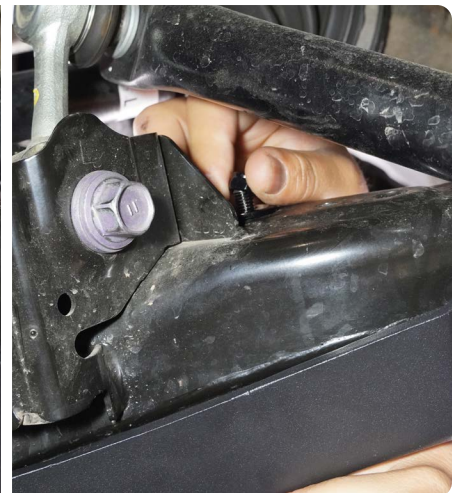

INSTALLATION MANUAL



STEP 4 | Double check that all hardware is secured on both A-Arms.

Congratulations, installation of the DV8 A-Arm Skid Plates is now complete.

