

ROCK SLIDERS

2021+ 4 DOOR FORD BRONCO

SRBR-07



TOOLS REQUIRED

- Pry Bar
- 13mm, 15mm, 18mm Sockets

SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 3 Hours

Time to install this should only take about three hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (2) M12x30 Hex Bolts
- (2) M12 Flat Washers
- (2) M12 Lock Washer





STEP 1 | Remove any factory sliders, steps or rock rails if equipped since they cannot be used with our steps. Broncos with factory equipped rock sliders will have brackets for mounting on the underside of the vehicle, these can remain on or be removed using a 13mm socket.




STEP 2 | On the front body mount, use a 15mm socket to remove the two bolts just outside of the main body mount bolt. When both bolts are removed, the small metal plate will become free.

Note: This plate will not be reused.

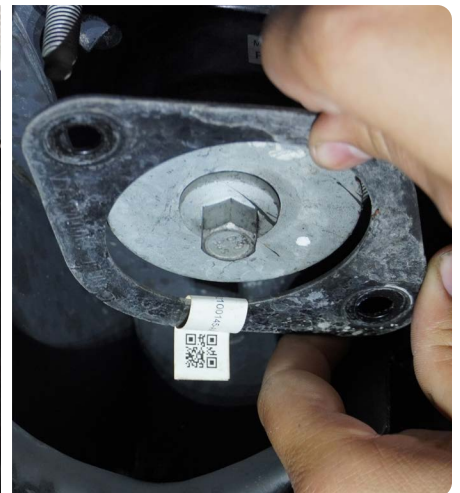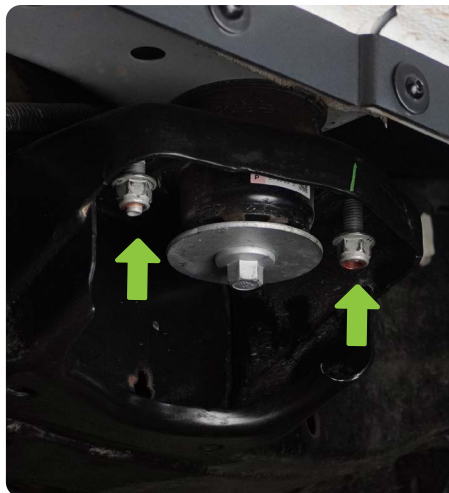


INSTALLATION MANUAL

STEP 3 | Remove the two outside bolts on the rear body mount using a 15mm socket.

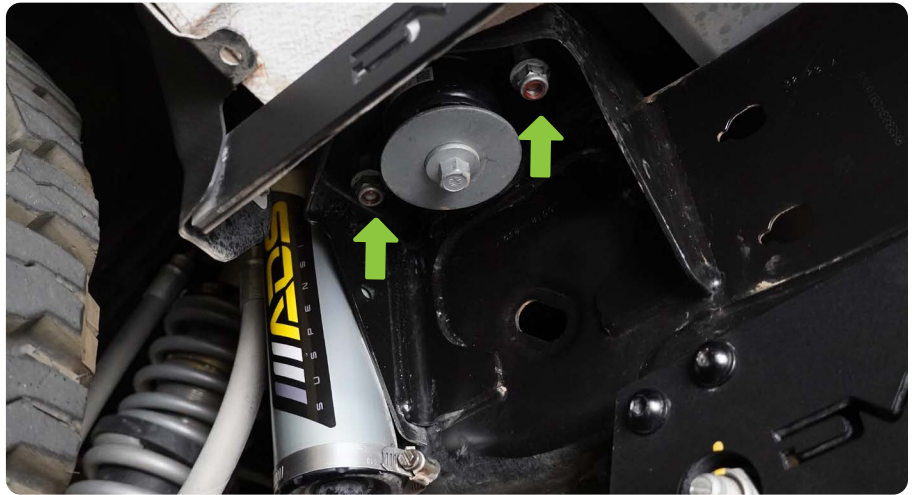

STEP 4 | Remove the two center bolts circled on the image. Loosen the three bolts to the fuel tank skid plate and allow for it to come down about two inches.

Note: Assistance from a floor jack can help raise and lower the tank.

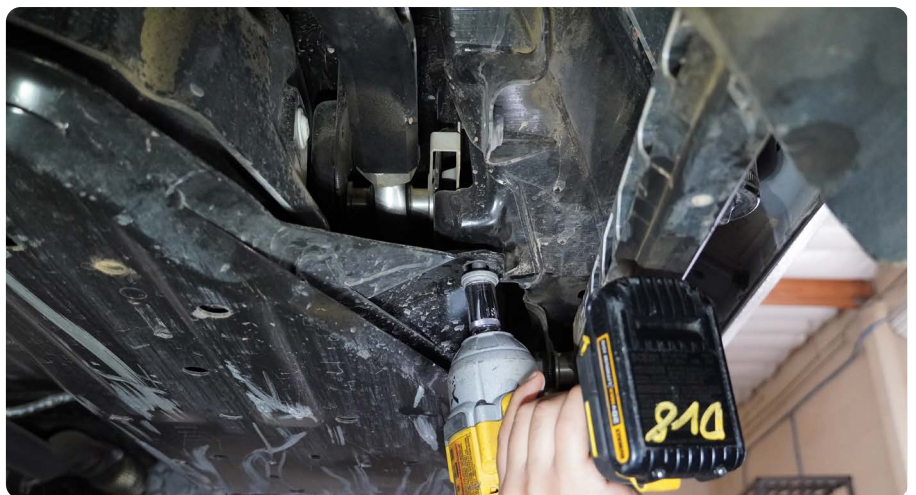

INSTALLATION MANUAL

STEP 5 | With assistance, hold the slider up to the body mounts so the slider is positioned over the studs.

Note: Each slider is labeled at the center mount showing a (D) for driver side and a (P) for passenger.




STEP 7 | Use a pry bar to assist in lowering the gas tank skid plate if needed.

Slide the mounting bracket in between fuel tank skid plate and frame rail.




INSTALLATION MANUAL

STEP 8 | Use a 18mm socket and factory hardware to secure the slider.

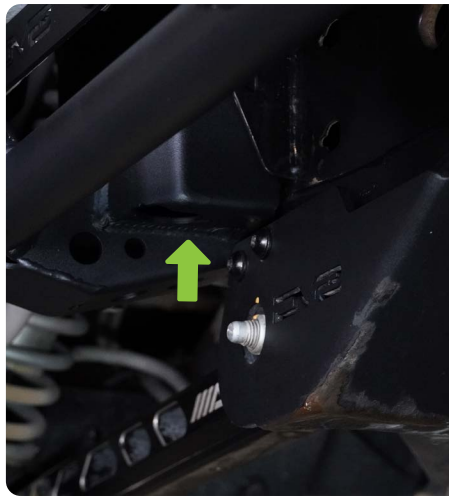

STEP 9 | Secure the skid plate bolts.

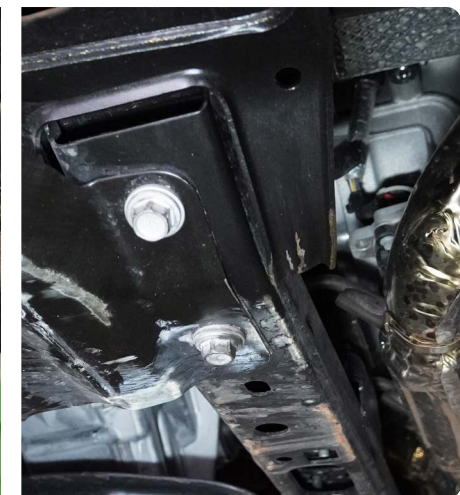

INSTALLATION MANUAL

STEP 10 | Complete steps 2 & 3 for the driver side.



STEP 11 | Use the provided M12 hardware for the center mount bracket.



STEP 12 | Double check all hardware is secure.

Congratulations, installation of the Bronco Rock Sliders is now complete.

