


## OE PLUS STEPS

2023+ COLORADO/CANYON

SRCS3-01

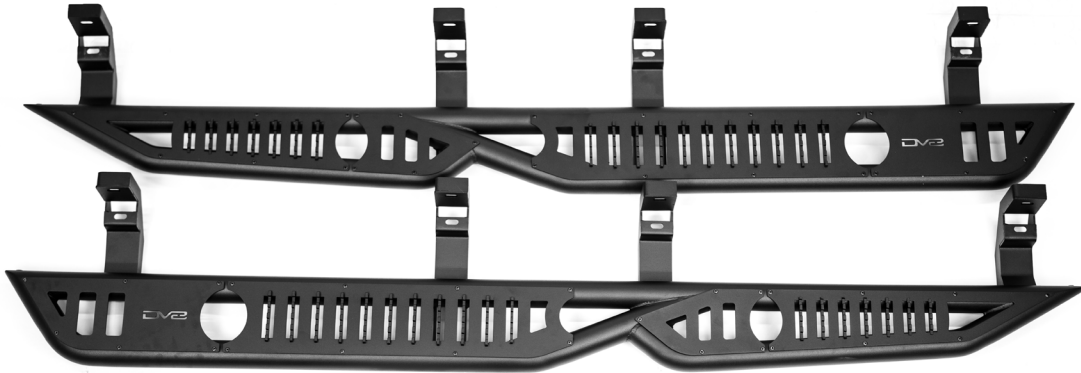

### TOOLS REQUIRED

- 13mm Deep-set Socket
- Pliers
- Safety Glasses

### SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1.5 Hours

Time to install this should only take about an hour and a half.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED


- (16) M8x30mm Hex Bolts
- (16) M8 Split Washers
- (16) M8 Flat Washers

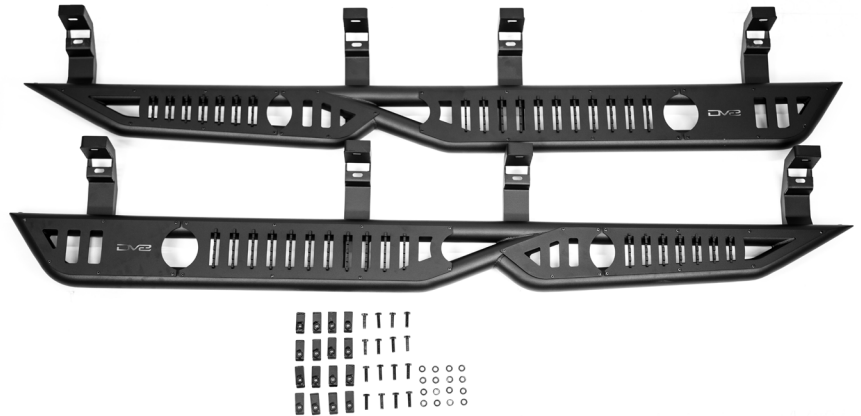

## STEP 1 | (Driver side installation shown on a vehicle with out factory steps).

If the factory nut-clips are not present, install the provided nut-clips. A pair of needle nose pliers can help place them correctly.

**(Vehicles equipped with factory steps/sliders):** Use a 13mm socket to remove the (16) factory bolts that secure the driver and passenger side steps/sliders. Use caution not to drop the step/slider on yourself, additional assistance is recommend.

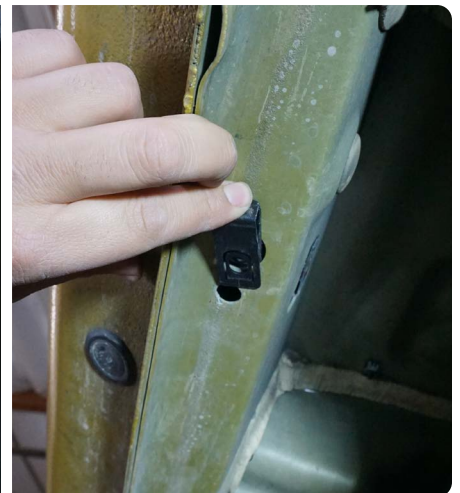

# INSTALLATION MANUAL


**STEP 2** | With assistance lift the DV8 OE Plus steps up to the vehicle. Use the provided M8x30 Hex bolts to loosely secure the DV8 OE Plus Steps to the vehicle.

Use (1) split washer and (1) flat washer per M8 hex bolt.



**STEP 3** | These OE Plus steps have the ability to be adjusted forward and backward, adjust the steps to your liking.

For this install, we aligned the front of the step with the rocket/fender gap.

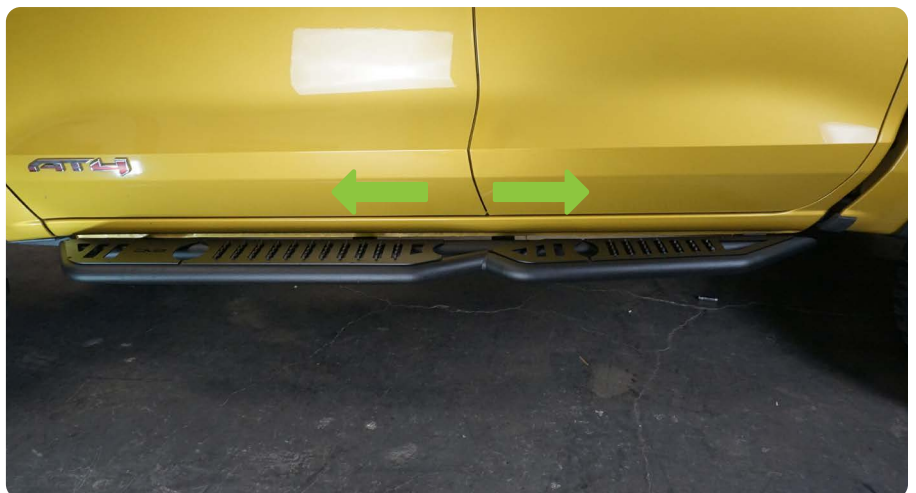


# INSTALLATION MANUAL



**STEP 4** | Secure the steps to the vehicle using a 13mm socket.

*Tech Tip: Secure the bottom bolts first then the top bolts.*

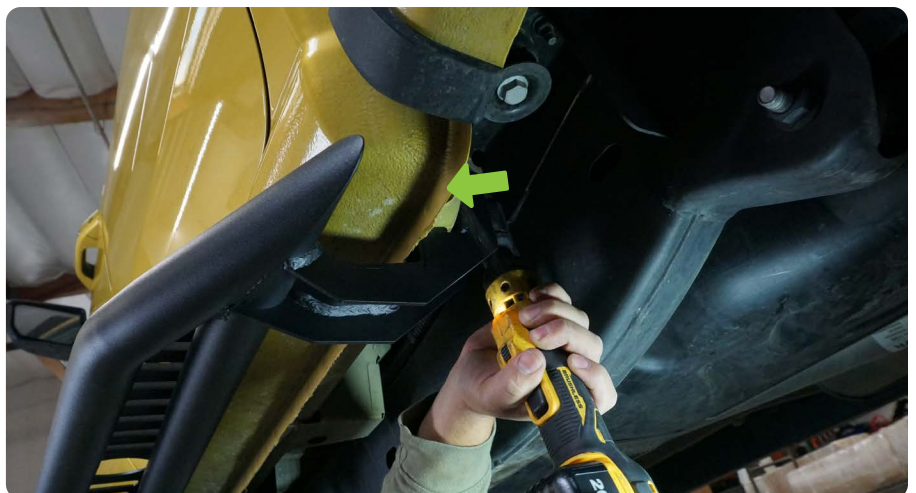

# INSTALLATION MANUAL

---

**STEP 5** | Complete steps 1-4 on the passenger side. Double check that all hardware is secured.

Congratulations, installation of the DV8 OE Plus Steps is now complete.

