

## 2-DR ROCK SKINS

18+ JEEP JL WRANGLER (2-DOOR)

SRJL-29



### TOOLS REQUIRED

- #3 Allen Bit
- Center Punch Tool
- 9/32" Drill Bit
- Sharpie
- 10, 12mm wrench (If you do not have a nutsert tool)
- HD Double Sided Tape (Optional)

### SKILL LEVEL

- Intermediate
  - 2 persons
- Intermediate skill level required, additional help is required for removal and installation of sliders/skins.

### TIME REQUIRED

- 3.5 Hrs
- Time to install this should take three and a half hours.

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

# INSTALLATION MANUAL

**STEP 1** | If you have factory steps or sliders, they will need to be removed prior to install.

Use a 10mm socket to remove the factory nuts securing the slider to the body/pinch weld.

Then, while a friend supports the slider, remove the remaining factory hardware using a 13mm socket.

Remove the slider and set it off to the side. Repeat steps for opposite side of the vehicle.

*Note: Assistance is recommended to prevent injury and damage to the product or vehicle.*




# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

## HARDWARE INCLUDED

- (36) M5x12 Nutserts
- (32) M5x16 Allen
- (1) Nutsert Tool

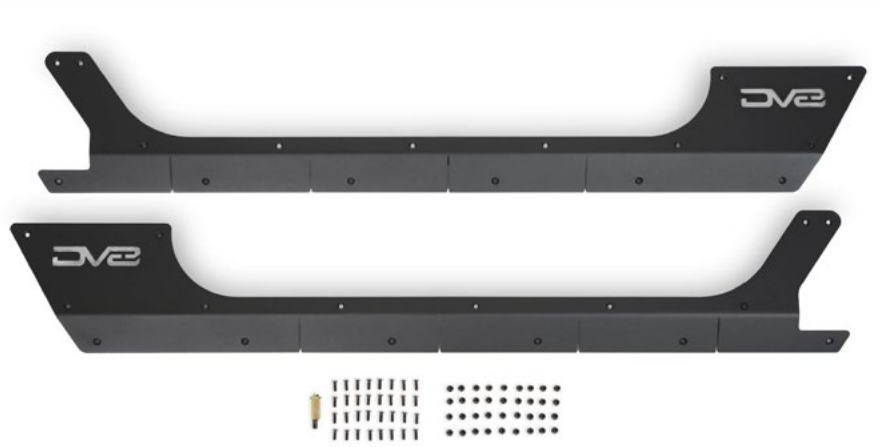

**STEP 2** | It is recommended to clean the vehicle of any dirt or debris prior to beginning installation.

With assistance, lift the rock skin to the vehicle and determine the placement (see next page for example fitment picture).

*Installers Tip: Use HD double sided tape to hold the skins firmly in place, so you can mark holes without the worry of the skins shifting.*




# INSTALLATION MANUAL

**STEP 3** | When satisfied with the fitment, firmly hold the rock skin in place and use a sharpie to mark six to seven mounting holes strategically along the skin.

Mark holes below and above the bend at the rear, middle, and front of the rock skin (Do not use the holes that have "x"s over them).

DO NOT LET THE SKINS SHIFT WHILE MARKING THESE HOLES.

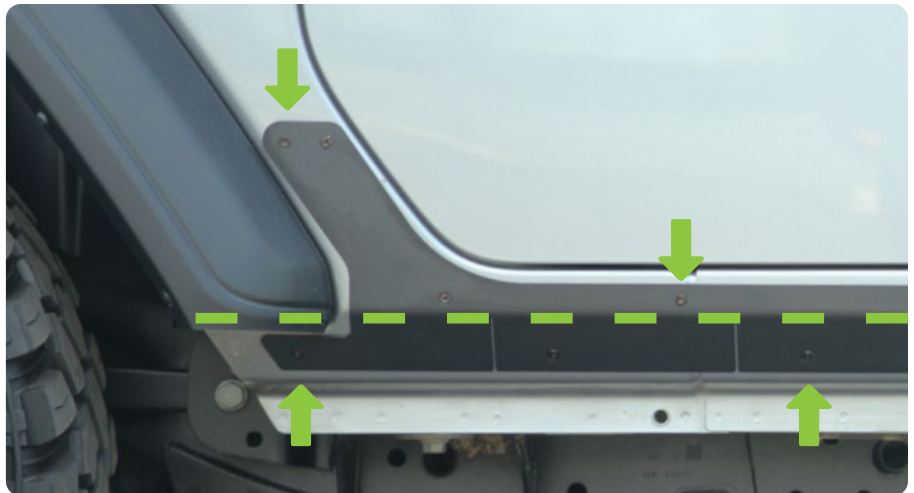

# INSTALLATION MANUAL

**STEP 4** | Remove the rock skins and use a punch tool gently mark the mounting holes for drilling.

Be sure to mark the center of the marked area.



**STEP 5** | Drill out the marked mounting holes using a small drill bit, working your way up to a 9/32" bit.



**STEP 6** | Install the provided nutserts using a nutsert tool.

If you do not have a nutsert tool, we have provided one with the hardware kit.

For instructions on how to use the provided nutsert tool, scroll to the last page of this manual.



## INSTALLATION MANUAL

**STEP 7 |** Install the rock skins on the vehicle and secure to the mounting points using the provided M5 hardware with a #3 allen bit.



**STEP 8 |** With the rock skins installed and the hardware secure, use a punch tool to mark the remaining mounting holes for drilling.

Be sure to mark the very center of the mounting hole.

Once all holes have been marked, remove the hardware and rock skins.



# INSTALLATION MANUAL

**STEP 9** | Carefully drill out the remaining mounting holes using a small drill bit, working up to a 9/32" bit.



**STEP 10** | Install the provided nutserts into the remaining mounting holes using a nutsert tool (or the provided nutsert tool, if you do not have one).



Loosely install rock skins using the provided M5 hardware. Do not secure until all hardware is partially threaded.

Secure using a #3 allen bit.

While working, check previously tightened hardware often, as it may become slightly loose as you work to tighten the remaining hardware.



# INSTALLATION MANUAL

**STEP 11** | Double check all hardware is secure.

Repeat steps for opposite side.



**STEP 12** | Congrats! You are finished with the install of the 18+ Jeep JL Wrangler 2-DR Rock Skins.





# INSTALLATION MANUAL

**STEP 13** | To use the nutsert tool, slider the M6 washer and spacer onto the provided M6x50 bolt with the washer going on the bolt first.

Then install a nutsert onto the exposed threads by hand.



**STEP 14** | Slide the nutsert tool with the nutsert into the mounting hole.

Ensure the flange of the nutsert is flat against the vehicle prior to tightening.



**STEP 15** | Use a 12mm wrench to hold the spacer while tightening with a 10mm socket. Tighten slowly until the nutsert is set properly. Do not over tighten.

Nutsert should be “crushed” against the inside of the trim so that it is tight and secure. When finished remove the nutsert tool using a 10mm socket and repeat as needed.

