


TIRE CARRIER REINFORCEMENT MOLLE

2021+ FORD BRONCO

TCBR-04

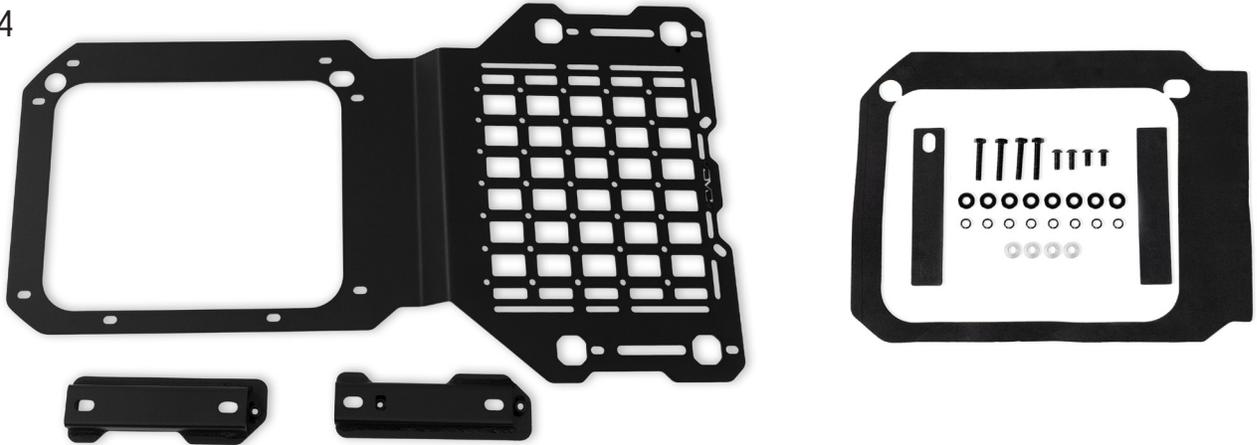

TOOLS REQUIRED

- T45 Torx Tool
- #5 Allen Tool
- 13mm 15mm sockets
- Safety Glasses

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1.5 Hours
- Time to install this should only take about one and half hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (2) M8x20 Allen head Bolts
- (2) M8x16 Allen Head Bolts
- (4) M8x45 Hex Bolts
- (8) M8 Lock Washers
- (8) M8 Flat Washers
- (4) Cone Washers

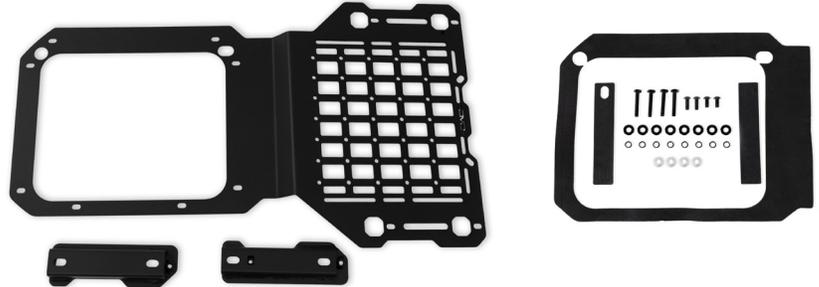


STEP 1 | Begin by removing the spare tire using your lug nut tool.

Note: Assistance is recommended to prevent injury and damage to the vehicle.




STEP 2 | Use a 13mm socket to remove the eight bolts securing the factory spare tire carrier to the vehicle.

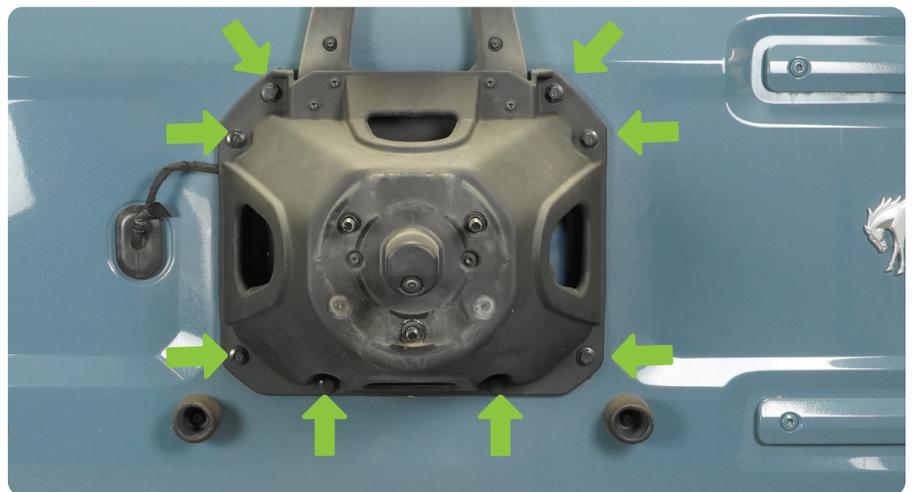

INSTALLATION MANUAL

STEP 3 | Remove the factory tire carrier. Secure so that the weight of the mount so it does not pull on the wire harness.

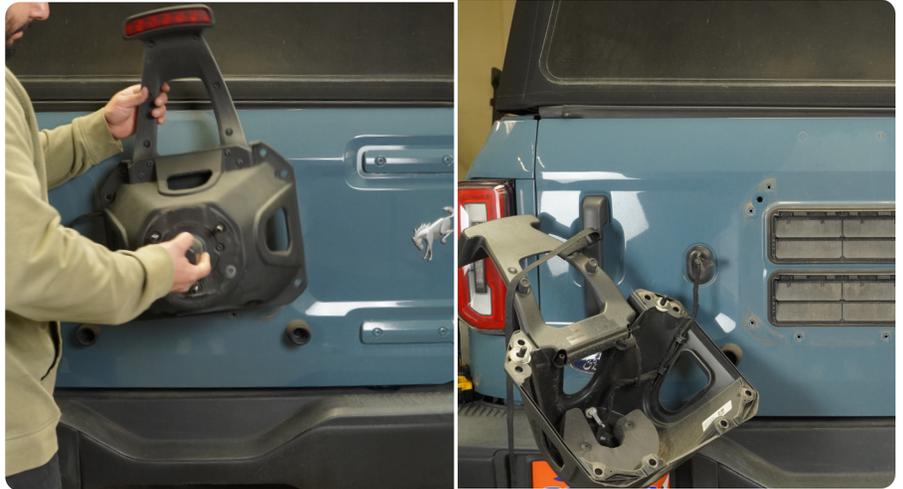

STEP 4 | Use a T45 to remove the bolts from the top door hinge.

Note: Keep the tailgate closed until these hinges are re-secured.



STEP 5 | Place the provide foam onto the mounting bracket as shown.



INSTALLATION MANUAL

STEP 6 | Using the M8x40 hex head bolts and a 13mm socket, install the top mounting bracket to the top hinge.

Use the provided cone spacers between the mount and the OE hinge as shown (green arrows).

The thicker mount will be on top. Reference 3rd image on step 7 for bracket orientation.



INSTALLATION MANUAL

STEP 7 | Once the top is installed, repeat the steps for the bottom hinge.



INSTALLATION MANUAL


STEP 8 | Place the provided foam onto the backside of the carrier molle.

Note the direction of the foam and panel to prevent placing it on the wrong side.




STEP 9 | Hold the panel up to the hinges installed earlier and align the nutserts on the hinges to the slots on the panel.

Line up the notches (green arrows) in the panel and the hinges so they align. Mount using a #5 allen head and the M8 allen head bolts.

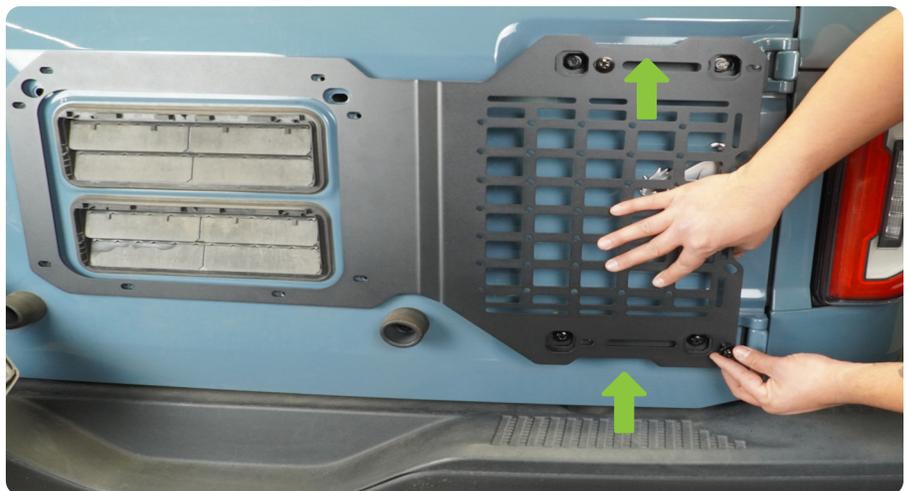


INSTALLATION MANUAL

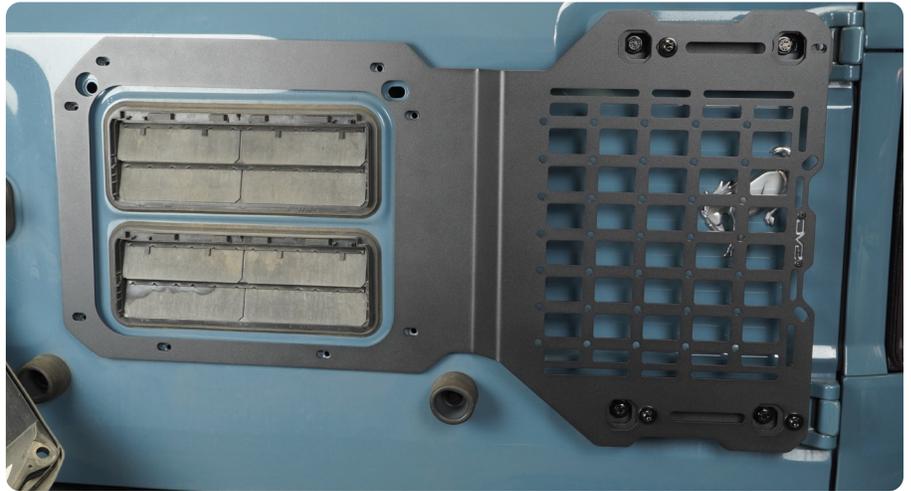

STEP 10 | Hold up the factory tire carrier and using the factory hardware and 13mm socket, install the carrier over the reinforcement plate.

Note: If installing a tire delete, start from this point.

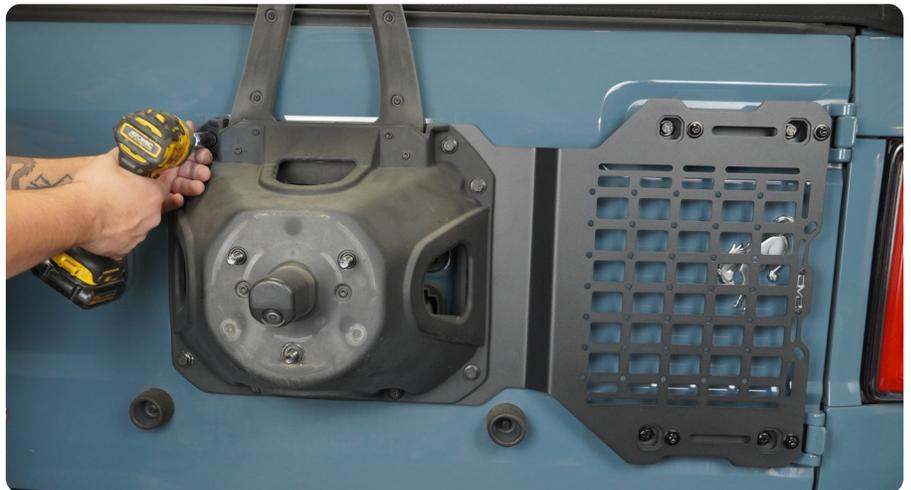

STEP 11 | Tighten the hinge mounting hardware using a 13mm socket until secure.



INSTALLATION MANUAL

STEP 12 | Reinstall the tire onto the tire carrier and tighten lug nuts to factory recommended torque for the spare mount.



STEP 13 | Double check all hardware is secure.

Congratulations, you are done with the install of the DV8 Bronco Reinforcement Molle Panel.

