

UNIVERSAL TOOL MOLLE MOUNT UNMM-01 (BL/RD/GR)



TOOLS REQUIRED

- 10mm wrench or socket
- 4mm allen head

SKILL LEVEL

- Novice
- 1 (you)

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

(4) M6x20 taper allen head bolts

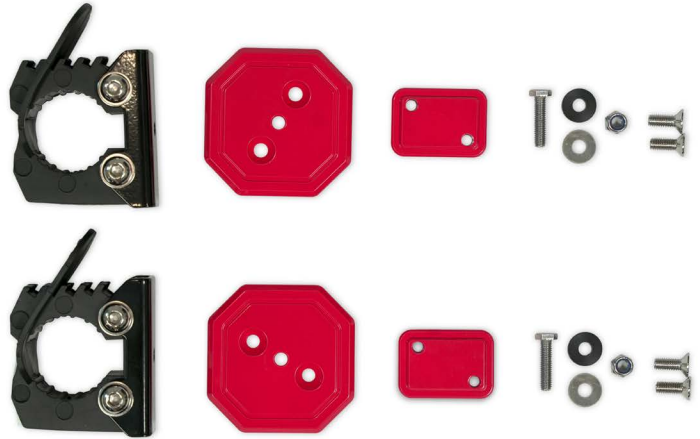

STEP 1 | Begin by turning the center mount so that the two allen head bolts are exposed.

Using a #4 allen, move the bolts from the mount.



STEP 2 | With the screws removed the back should come off.



INSTALLATION MANUAL

STEP 3 | Place the back piece of the mount on the molle panel, and line up the front portion with the hardware.




STEP 4 | Using the #4 allen head, secure hardware.



INSTALLATION MANUAL

STEP 5 | Once secure, the mount is able to rotate. If you do not wish for it to rotate, secure the nut in the center of the mount with a 10mm socket.

When securing gear in the rubber mount, do not over tighten or rubber strap can break.

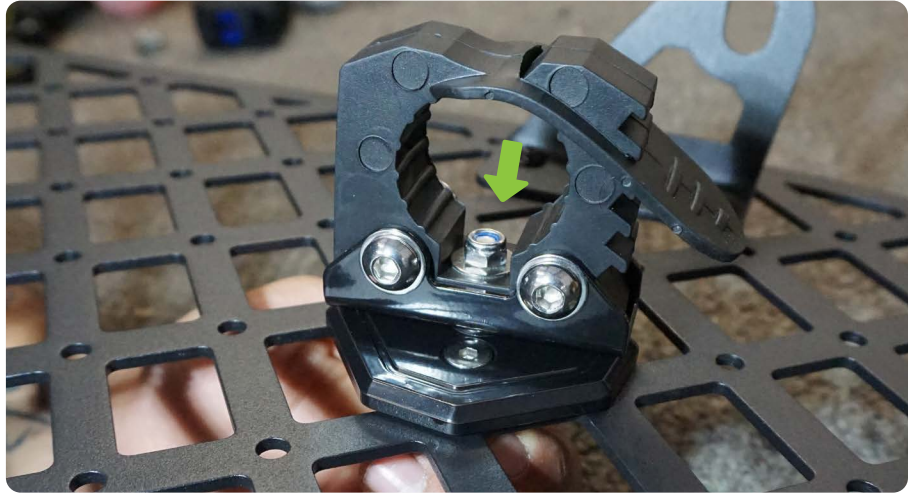

STEP 6 | Congratulations, you are done installing the DV8 Universal Tool Molle Mount.

