

XTRACT 9500 WINCH

UNIVERSAL

WB95SK-SR



TOOLS REQUIRED

- + 14mm, 16mm, 17mm socket
- + Phillips screwdriver

SKILL LEVEL

- + Novice/Intermediate
- + 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful to prevent injury or damage.

TIME REQUIRED

- + Approximately 1.5 Hours

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• *Always wear eye protection when operating power tools*

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

HARDWARE INCLUDED


Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.




(4) M10x35 Bolts




(4) M10 Flat Washers



(4) M10 Split Washers



(4) M10 Square Nuts

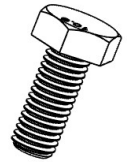

(2) M10x25mm Bolts



(2) M10 Nuts



PARTS INCLUDED



STEP 1 | START BY ASSEMBLING THE WINCH. USING A PHILLIPS HEAD SCREW DRIVER AND THE SUPPLIED HARDWARE TO INSTALL THE (2) MOUNTING BRACKETS ONTO THE SOLENOID BOX.

FACE THE SCREW SIDE OF THE BRACKET TO THE SIDE OF THE WIRES.


NOTE: DO NOT USE POWER TOOLS AS IT CAN DAMAGE THE THREADS ON SOLENOID BOX.

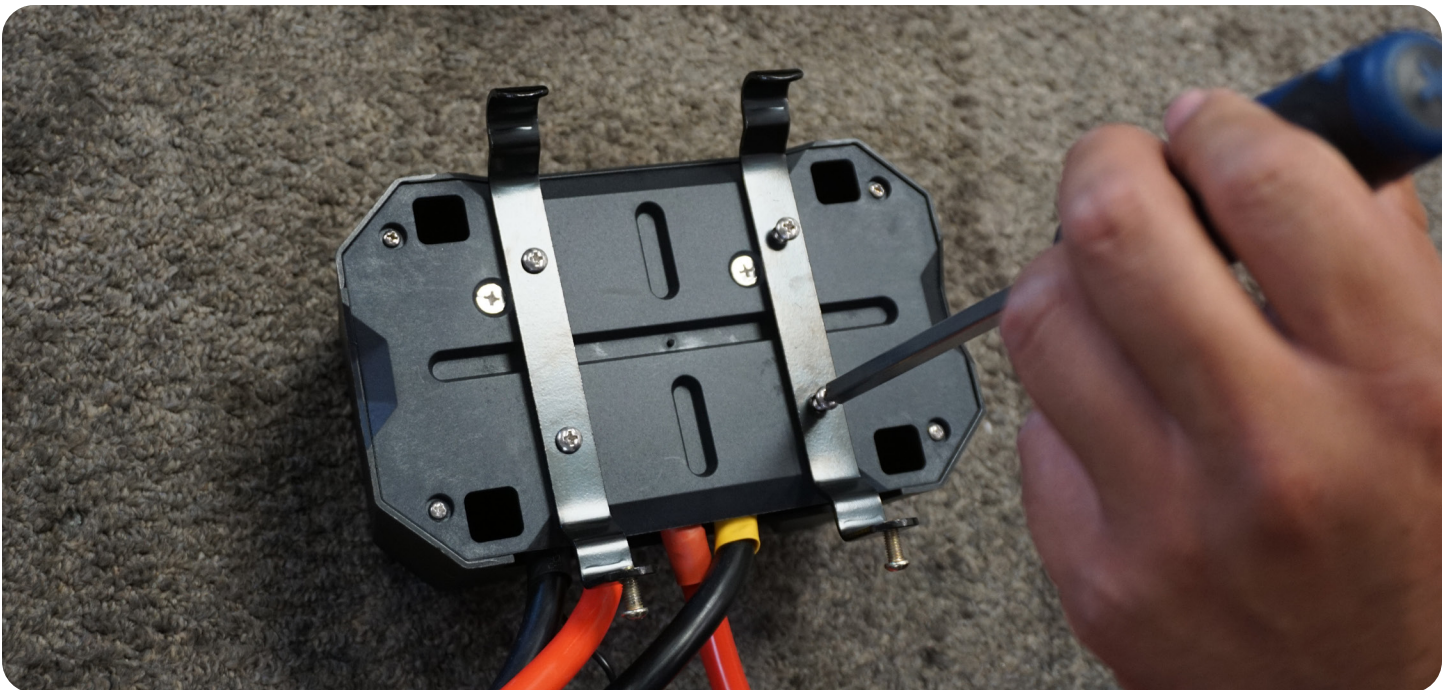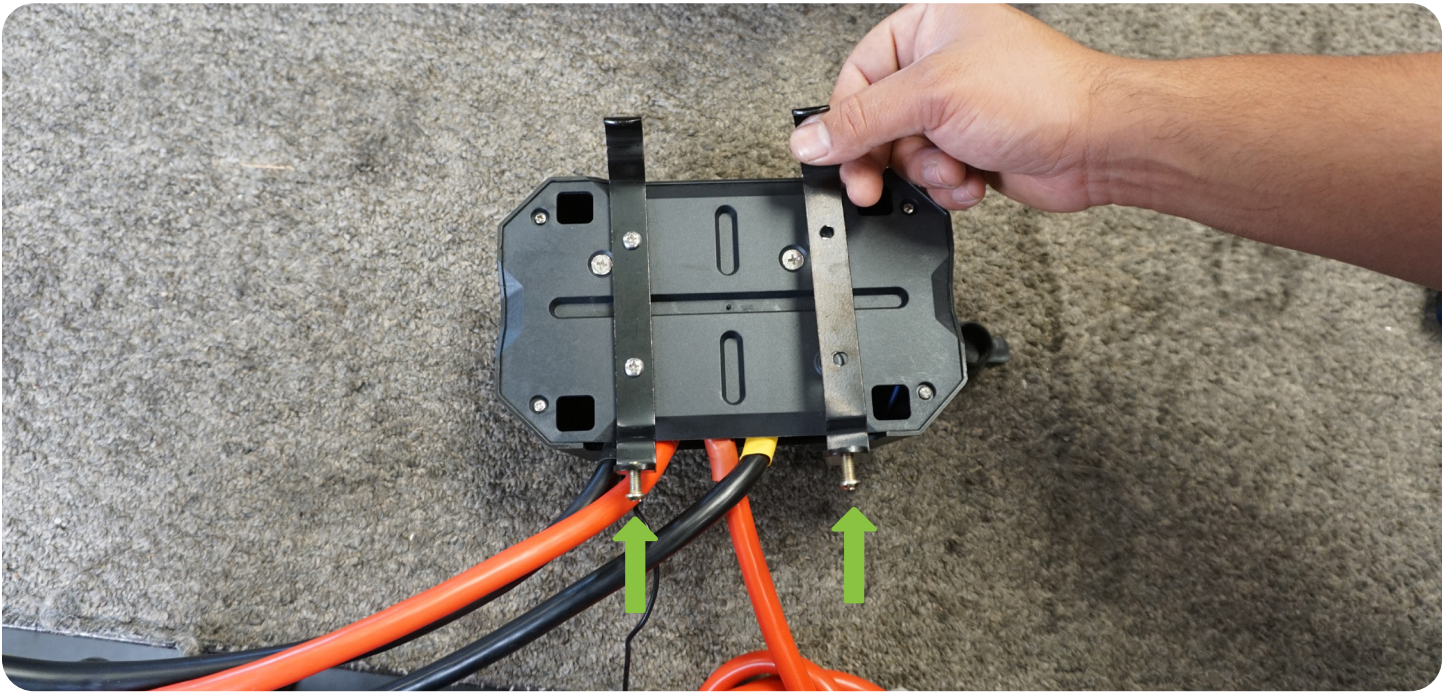



STEP 2 | PLACE SOLENOID BOX ON TOP OF THE WINCH WITH CABLES FACING BEHIND THE WINCH. ONCE ALIGNED, USING A PHILLIPS HEAD SCREWDRIVER, SECURE YOUR (2) SCREWS TO THE WINCH.



STEP 3 | ONCE SOLENOID BOX IS ATTACHED, BEGIN SECURING THE WIRES FROM THE SOLENOID BOX TO THE WINCH.

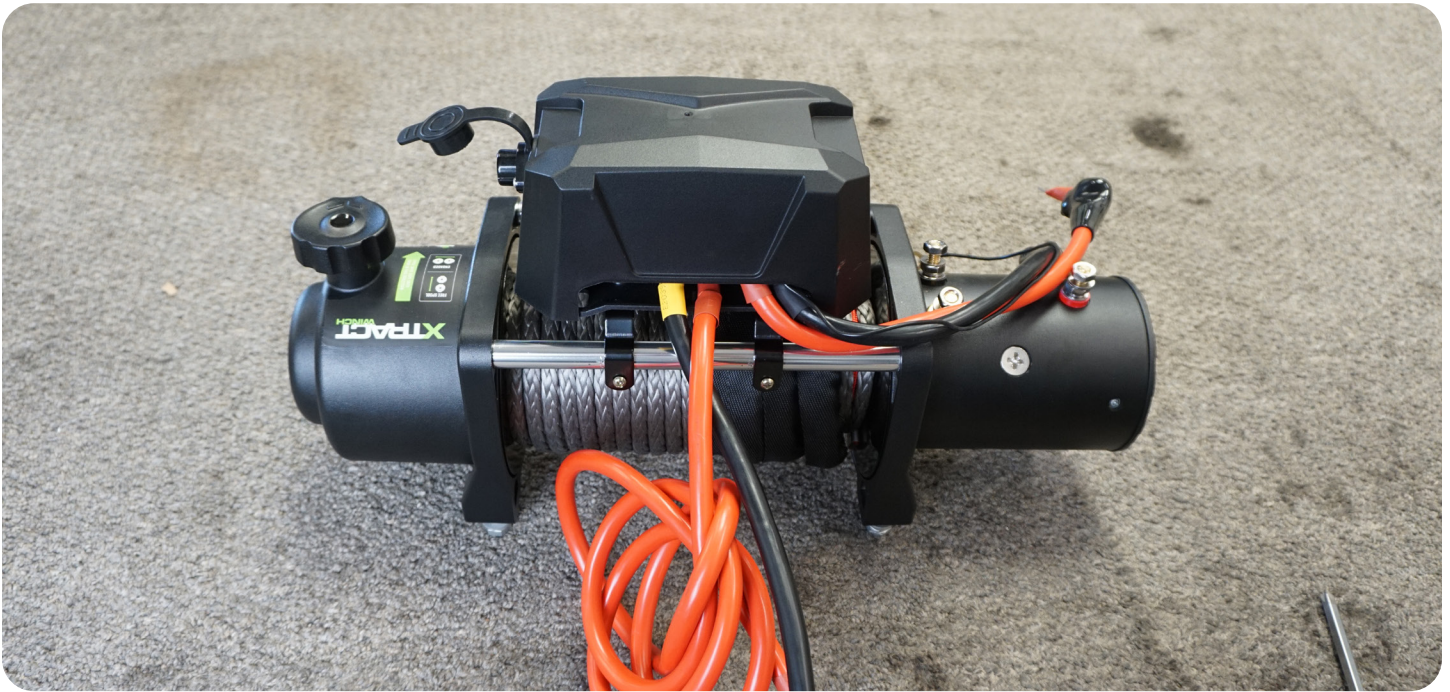

STEP 4 | ATTACH THE CABLES TO THEIR RESPECTIVE COLORS. BLACK CABLE WITH THE YELLOW HEAT SHRINK WILL GO WITH THE YELLOW POST. RED CABLE WILL GO WITH THE RED POST, AND BLACK CABLE WITH BLACK HEAT SHRINK WILL GO TO THE BLACK POST.

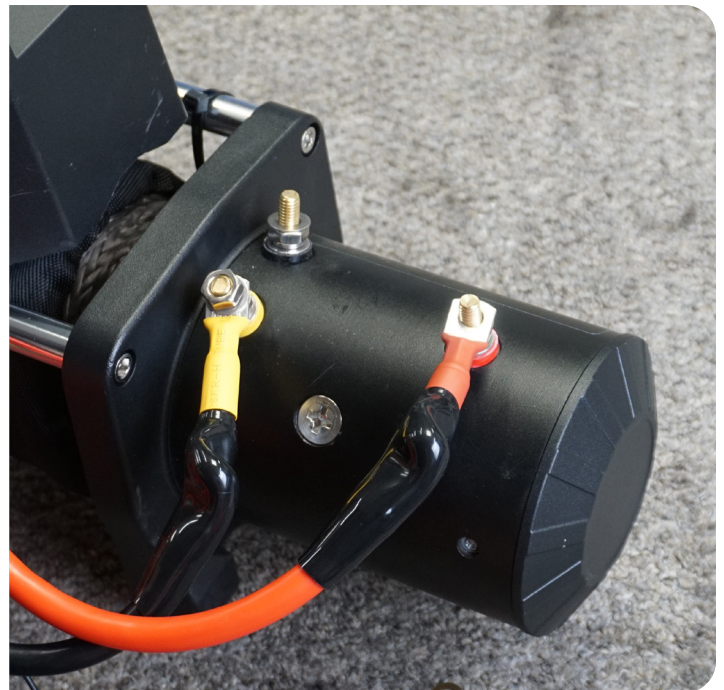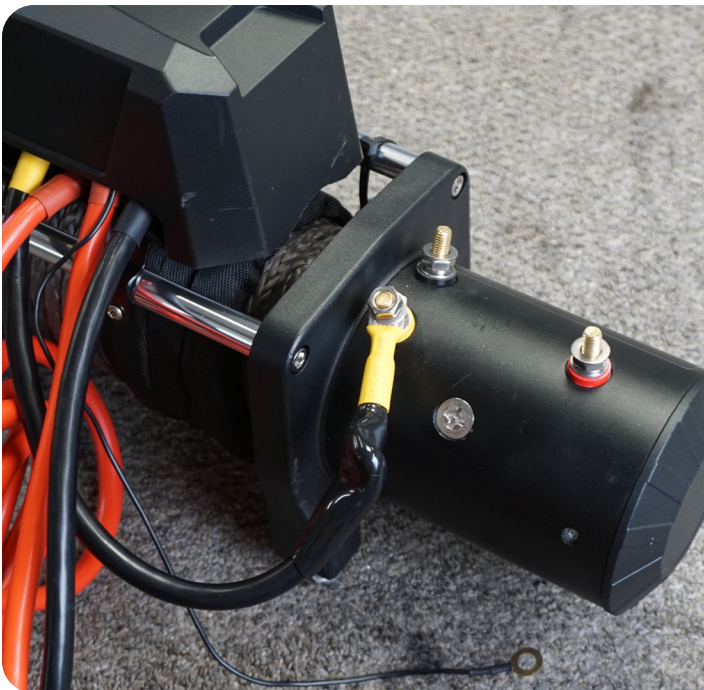

STEP 5 | ONCE THE CABLES ARE ON THEIR PROPER POST, SECURE YOUR CABLE USING THE PROVIDED NUTS USING 14MM SOCKET/WRENCH.

NOTE: DO NOT USE POWER TOOLS AS IT CAN DAMAGE THE POST AND CONNECTION WITH THE POST.



STEP 6 | PLACE THE WINCH ON IT SIDE AND CONNECT THE THIN WIRE AND THE LARGE BLACK CABLE, THAT WAS PROVIDED SEPARATELY, TO THE BOTTOM POST. USING THE 14MM SOCKET/WRENCH. SECURE THE NUT IN PLACE.



STEP 7 | USING THE PROVIDED MOUNTING HARDWARE, SLIDE THE (4) SQUARE NUTS INTO THE SLOTS OF EACH FOOT ON THE WINCH.



STEP 8 | INSTALLING WINCH TO WINCH PLATE. INSTALL THE (4) BOLTS TO THE WINCH. SECURE USING A 16MM SOCKET/WRENCH.



STEP 9 | WITH THE WINCH INSTALLED, MOUNT THE FAIRLEAD TO THE BUMPER USING THE PROVIDED HARDWARE. SECURE YOUR (2) BOLTS AND NUTS WITH A 17MM SOCKET AND WRENCH.





STEP 10 | IF USING THE PROVIDED HOOK, RUN THE WINCH CABLE THROUGH THE FAIRLEAD, PLACE THE HOOK OVER THE METAL LOOP, AND SECURE USING THE PIN AND COTTER PIN.



STEP 11 | TO WIRE THE WINCH, EACH VEHICLE WILL HAVE A DIFFERENT BATTERY LOCATION. ROUTE THE WIRES TO THE BATTERY AND PLACE THE RED CABLE TO THE POSITIVE SIDE OF THE BATTERY. BLACK CABLE TO THE NEGATIVE SIDE OF THE BATTERY.

NOTE: WE RECOMMEND A BATTERY OF 650CCA AND HIGHER TO WINCH.

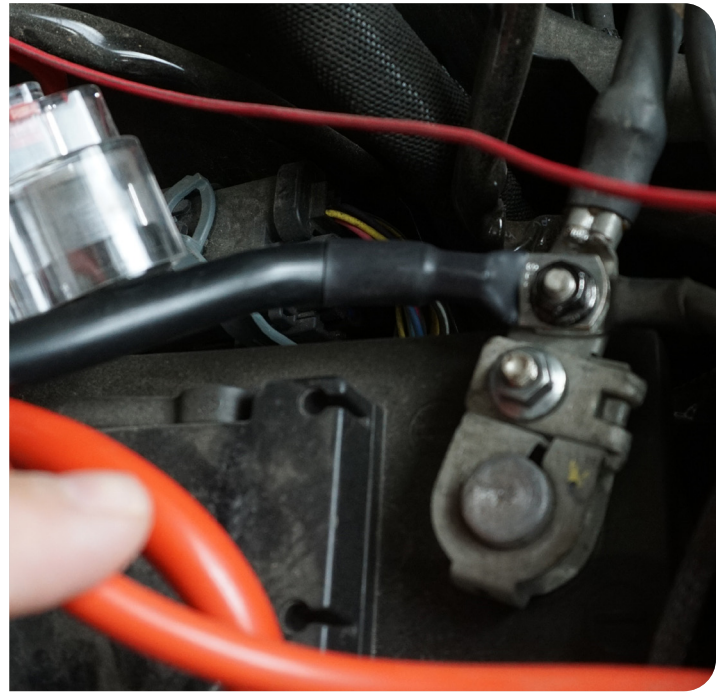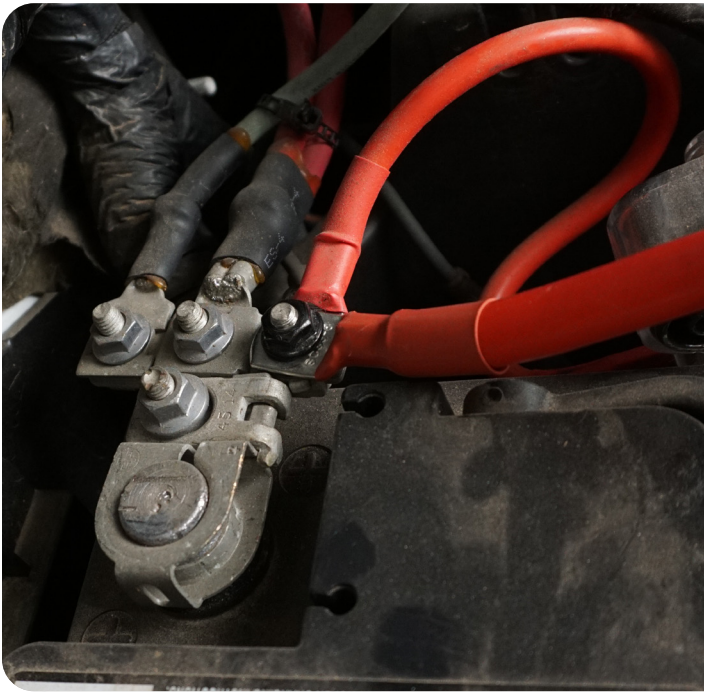

STEP 12 | ONCE WINCH IS INSTALLED AND WIRED, ENSURE THE WINCH CLUTCH IS IN THE “ENGAGED” MODE. PLUG IN THE WIRED CONTROLLER AND PRESS “OUT” ON THE REMOTE. ONCE CONFIRMED THAT THERE IS POWER TO THE WINCH, TIGHTEN THE LINE TO TAKE OFF ANY SLACK OFF THE LINE.

NOTE: WE HIGHLY RECOMMEND “PRE-TENSIONING” THE WINCH CABLE BEFORE USE.



STEP 13 | TO USE THE WIRELESS REMOTE, REMOVE THE WIRED REMOTE. ON THE WIRELESS REMOTE, PRESS THE RED POWER BUTTON UNTIL THE GREEN LIGHT ILLUMINATES. TO ENSURE CONNECTION WAS MADE, PRESS THE "OUT" BUTTON. HOLD THE POWER BUTTON AGAIN TO TURN REMOTE OFF.



CONGRATULATIONS

YOU ARE FINISHED WITH THE INSTALL OF THE XTRACT 9500LB WINCH

+ SHARE YOUR PICS

WE LOVE SEEING HOW OUR CUSTOMERS USE THEIR DV8 OFFROAD PRODUCTS AND FOLLOWING ALONG WITH YOUR ADVENTURES. TAG US IN YOUR PHOTOS @DV8OFFROAD. WE ENJOY SHARING CUSTOMER PHOTOS ON OUR FEED.



+ WRITE A REVIEW

ARE YOU HAPPY WITH YOUR NEW DV8 OFFROAD PRODUCT? WE WOULD LOVE TO HEAR AND SEE YOUR EXPERIENCE. VISIT THE PRODUCT PAGE AND CLICK "WRITE A REVIEW". ADD A SHORT REVIEW AND UPLOAD A FEW PHOTOS TO BE FEATURED ON THE PRODUCT PAGE.

WWW.DV8OFFROAD.COM

+ NEED HELP?

IF YOU ARE HAVING ANY ISSUES WITH YOUR PRODUCT, PLEASE REACH OUT. DV8 OFFROAD IS A COMPANY OF OFF ROAD ENTHUSIASTS THAT DESIGN AND USE OUR OWN PRODUCTS, SO WE WANT YOU TO BE JUST AS STOKED ON YOUR NEW PARTS AS WE ARE.

P. 855.680.9595

E. SALES@DV8OFFROAD.COM

